 
 



Assembly Instructions
instructions de montage
Instrucciones de montaje

BERLIN
GARDENS

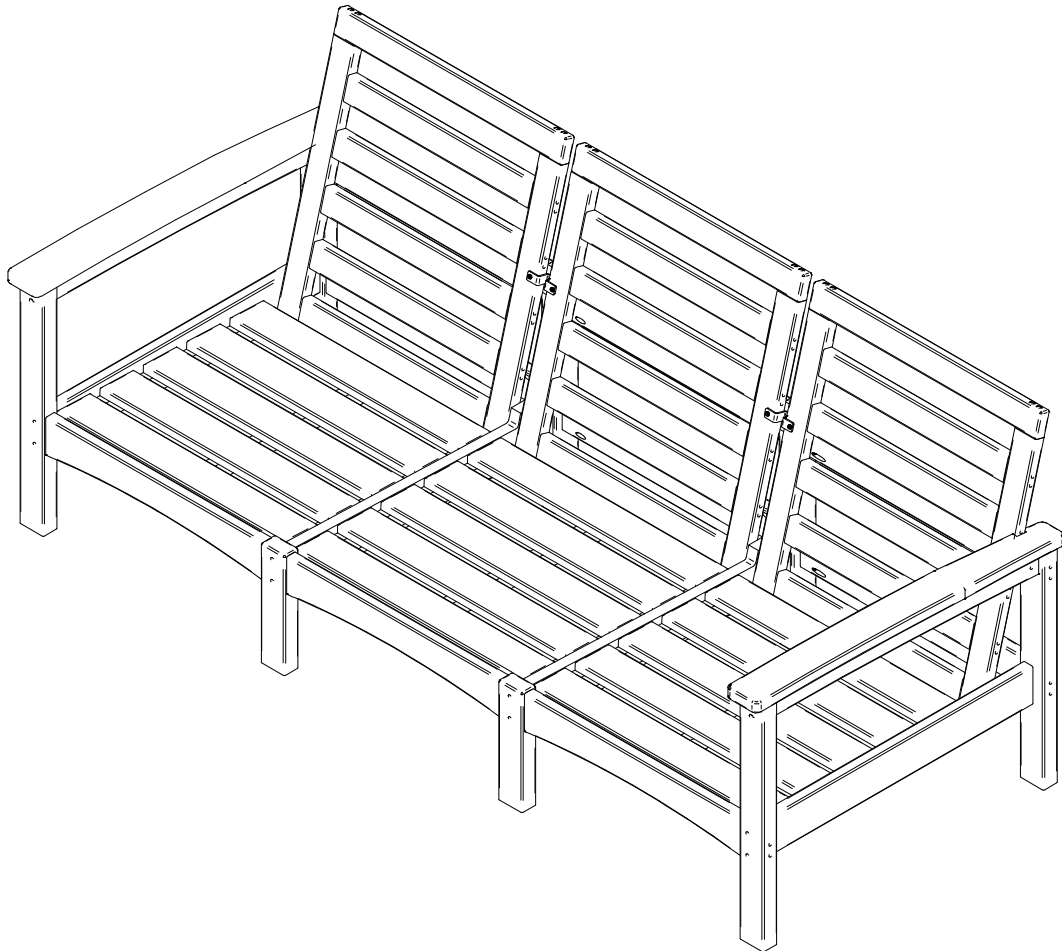


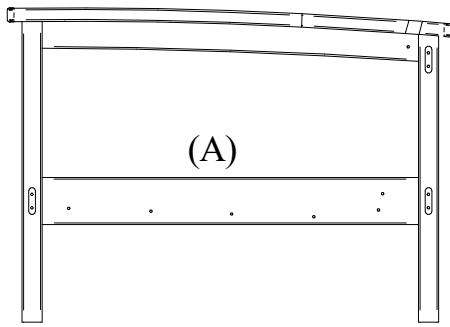

 (A)

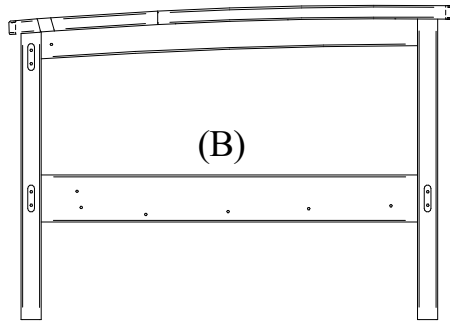

(B)

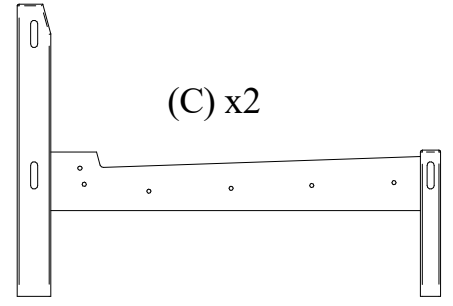 

(C) x2

(D) x4

 


(E) x2



(F)


(G)




(H)



 (I) x3

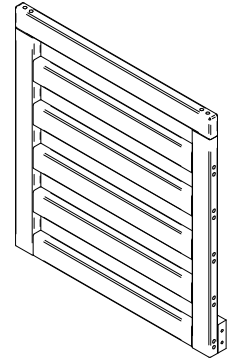

 
(J) x3

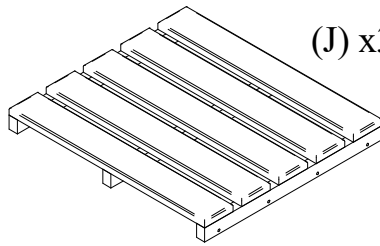


(K) x2

Hardware Included
Matériel inclus
Herrajes incluidos

 
(310400) x12




(38212) x2

 


(58200) x24

 

(4834) x6

 



(114134) x12

 

(6114) x12



  (214312) x12



#2 Square Drive Bit
Embout d'entraînement carré #2
Punta cuadrada n.º 2



 
(9532) x1





(95321) x1





Items Not Included
Articles non inclus
Artículos no incluidos

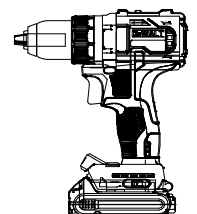

  
- 1** (C) x1
 (D) x2
 (E) x2
 (F) x1
 (G) x1

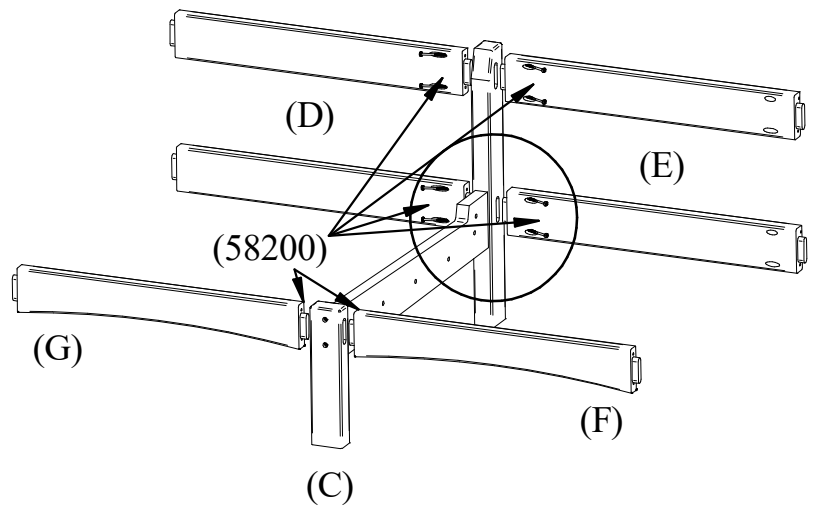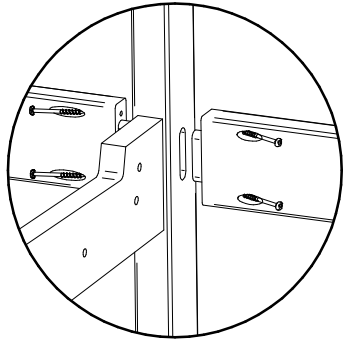


- 2** (C) x1

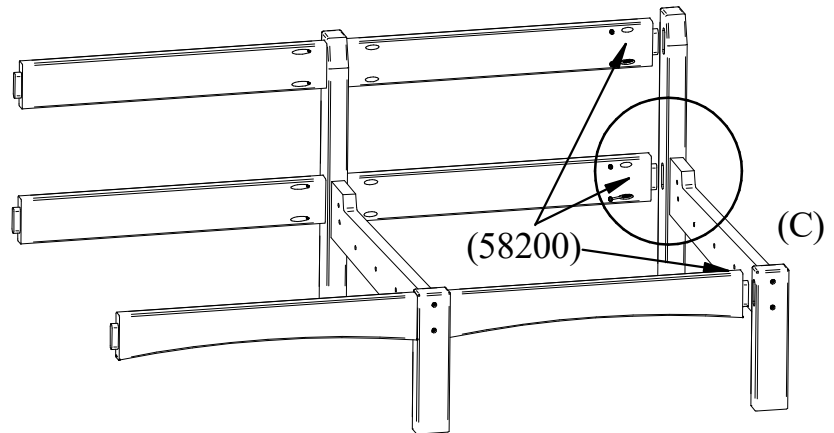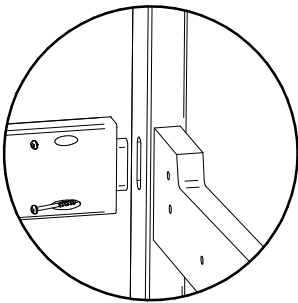  


- 3** (D) x2
 (H) x1

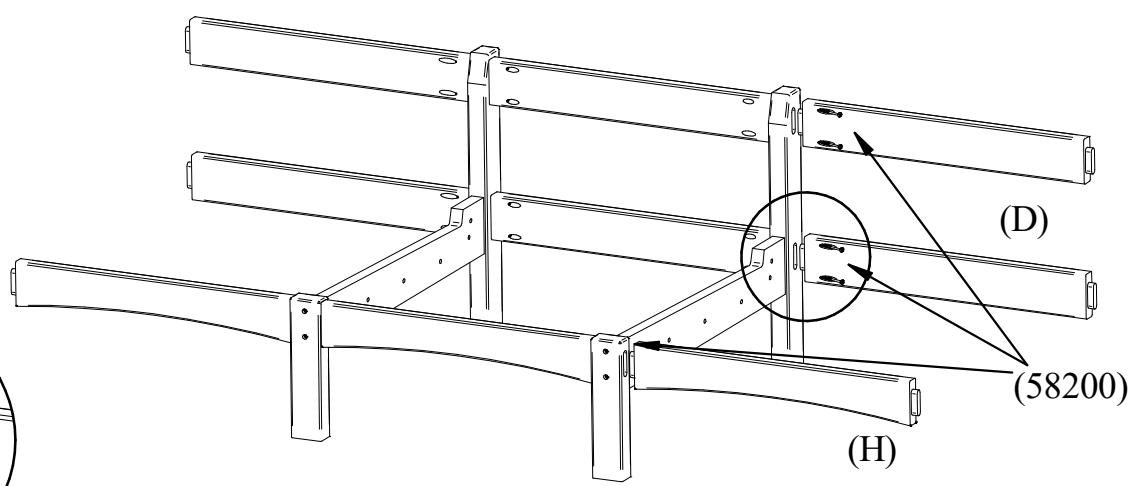 


4 (I) x3

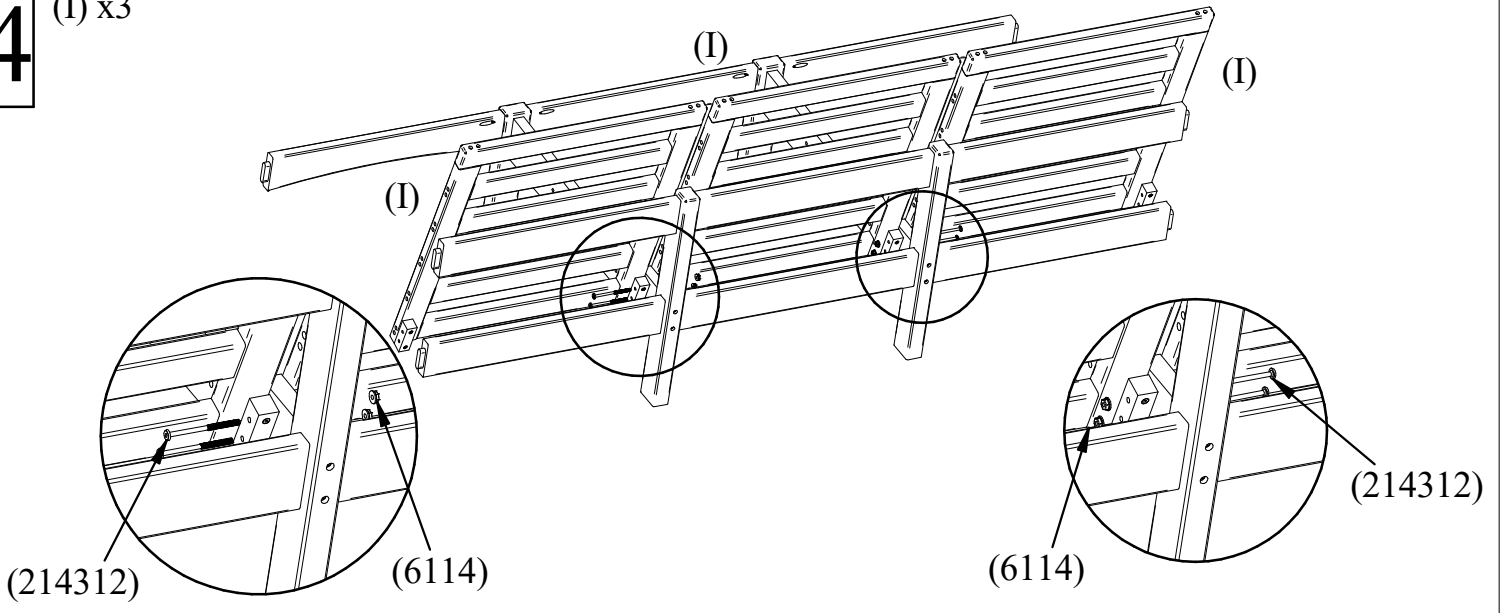 


5 (J) x3

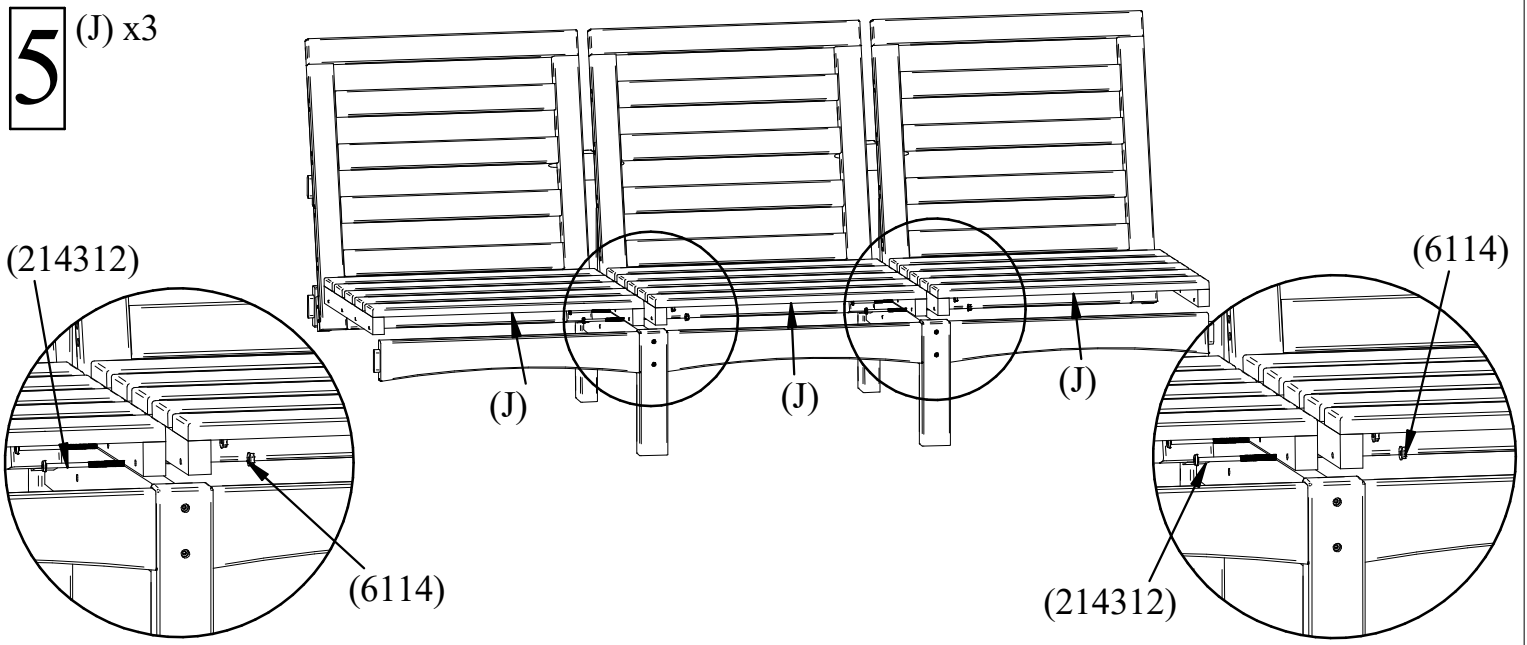 


6 (A) x1
(B) x1

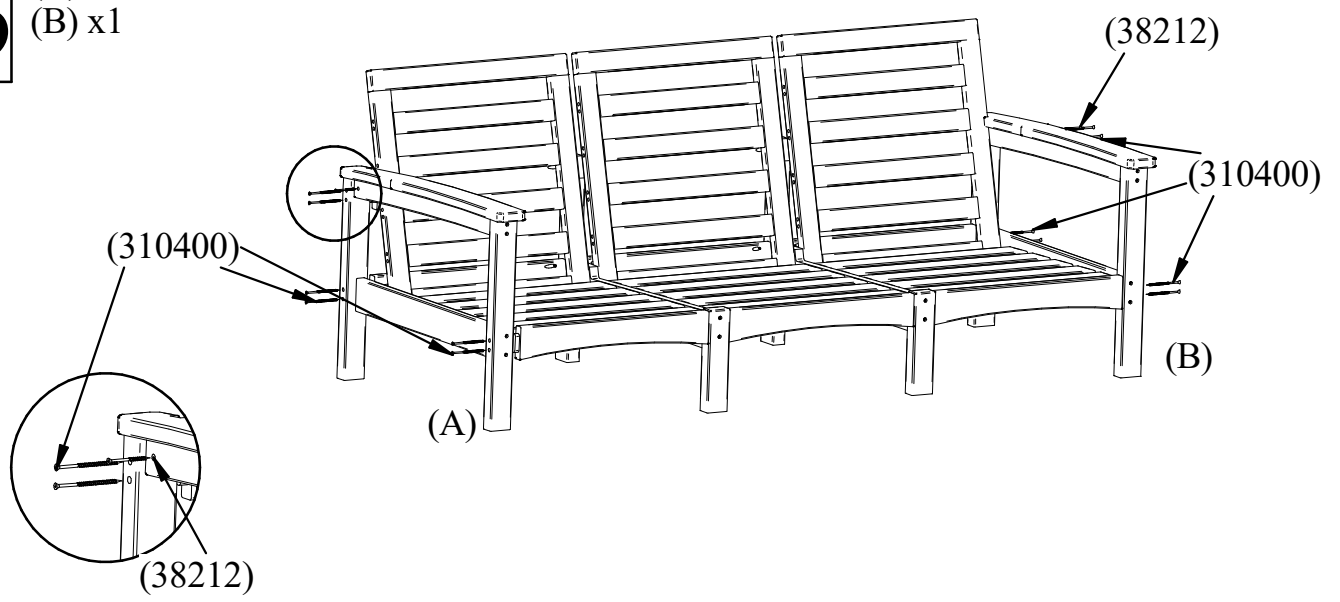 


7

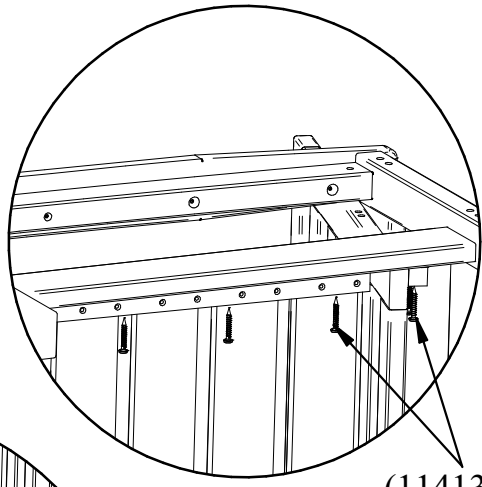 

(114134)

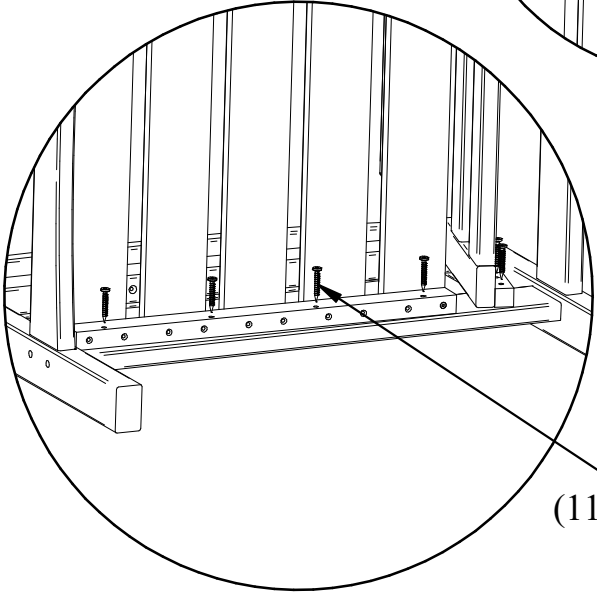 


(114134)

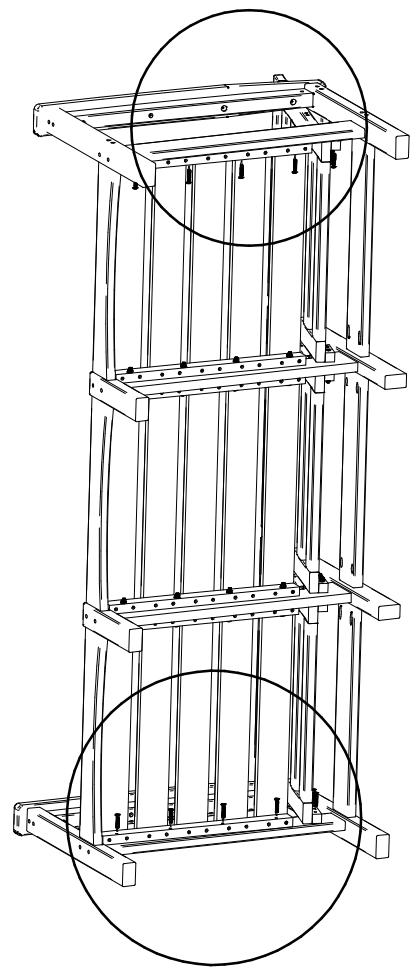 


8

 (K) x2

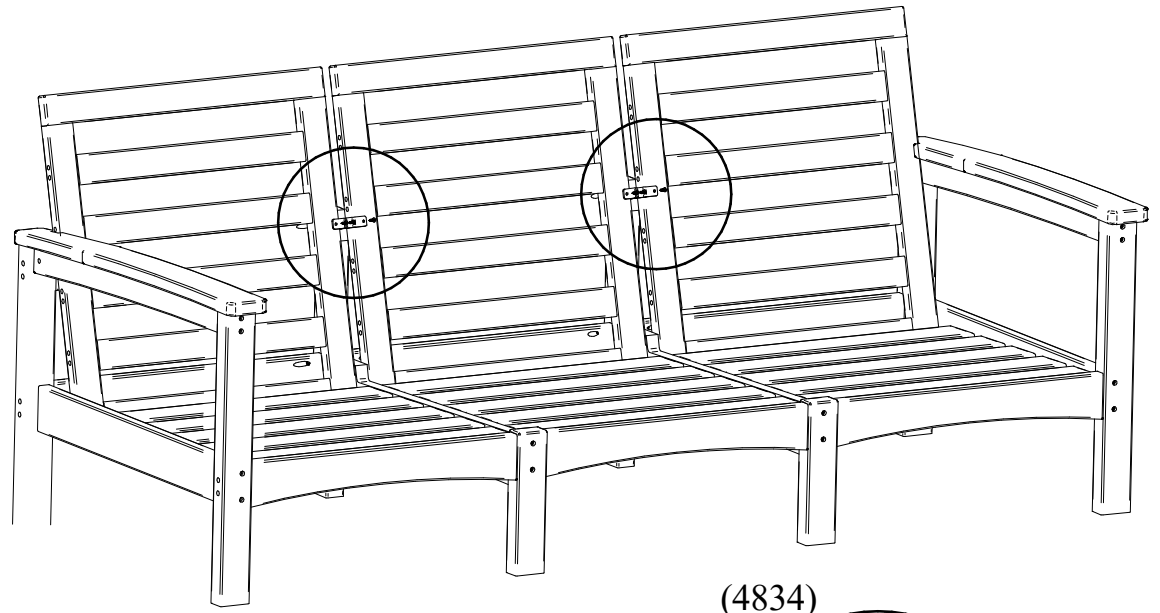


(4834)

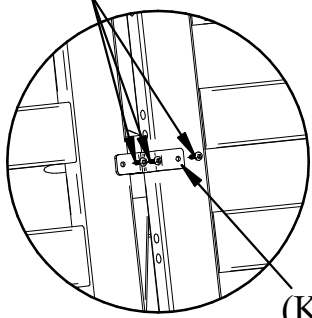 

(K)

 (4834)

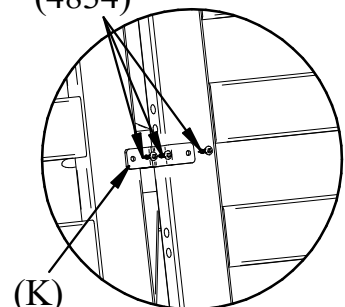

(K)