

Assembly Guide


Applies for: DRFP4254, DRFT4254D, DRFT4254C, DRFT4254B



DRFT4254C Donoma 42"x 54" Rectangular Fire Table (Dining, Counter & Bar Heights)



DRFP4254 Donoma 42"x 54" Rectangular Fire Pit

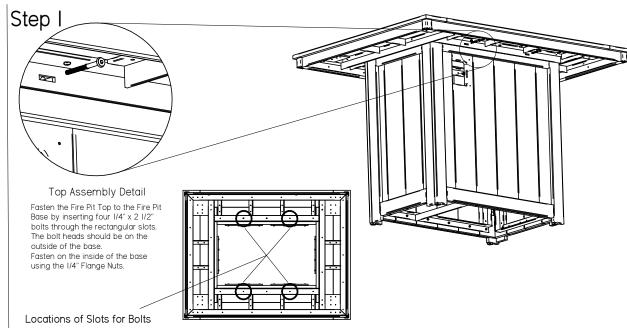





1/4" Flange Nuts 3/4" Panhead Screws

I/4" x 2 I/2" Bolts



When tightening screws or lags, DO NOT OVER-TIGHTEN to avoid stripping their hold on the material!

Tools / Items Needed



(not included)

(included)



Cresent Wrench







Cordless Drill

#2 Square Drive Bit

Step 2

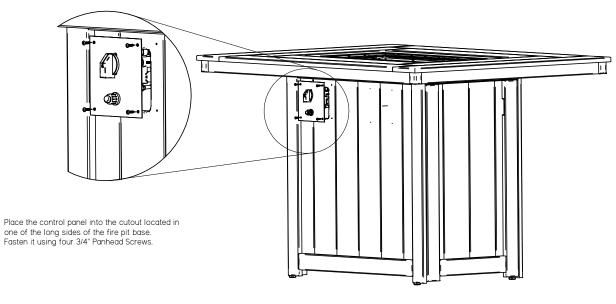

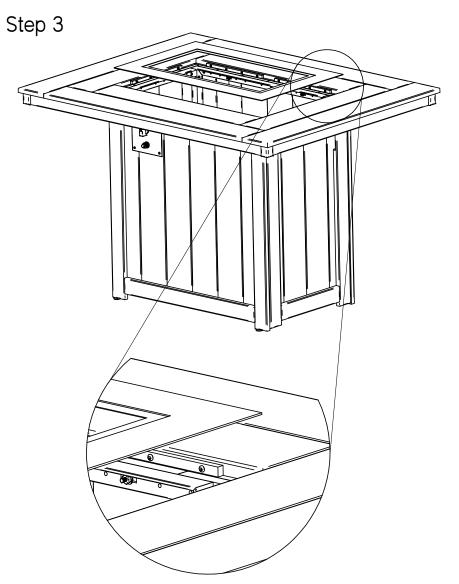

Stainless Steel Heat Barrier Placement

Place the stainless steel heat barrier on top of the aluminum support pieces located at the edge of the opening in the center of the fire pit top. Ensure that the recessed edge of the heat barrier is turned upward and remove the protective sticker.

Step 4

Place the Burner on top of the recessed edge of the Stainless Steel Heat Barrier.

For Installation of the Burner, connecting gas, igniter and operation instructions, see The Outdoor Great Room Company Crystal Fire Manual that is included with the Burner.



Step 5

A Place Propane Tank on Tank Carrier and slide into the base and close the door.

B. Spread Fire Pit Gems into the burner evenly.

Place the Glass Wind Guard on top of the Heat Barrier so that the burner is centered in it.

Your Fire Pit or Table is complete!

