 


Mayhew Chat & Chat Dining Swivel Rocker
Mayhew Chat & Chat Dining Swivel Rocker
Mecedor giratorio Mayhew Chat & Chat Dining

 
Assembly Instructions
instructions de montage
Instrucciones de montaje

BERLIN
GARDENS

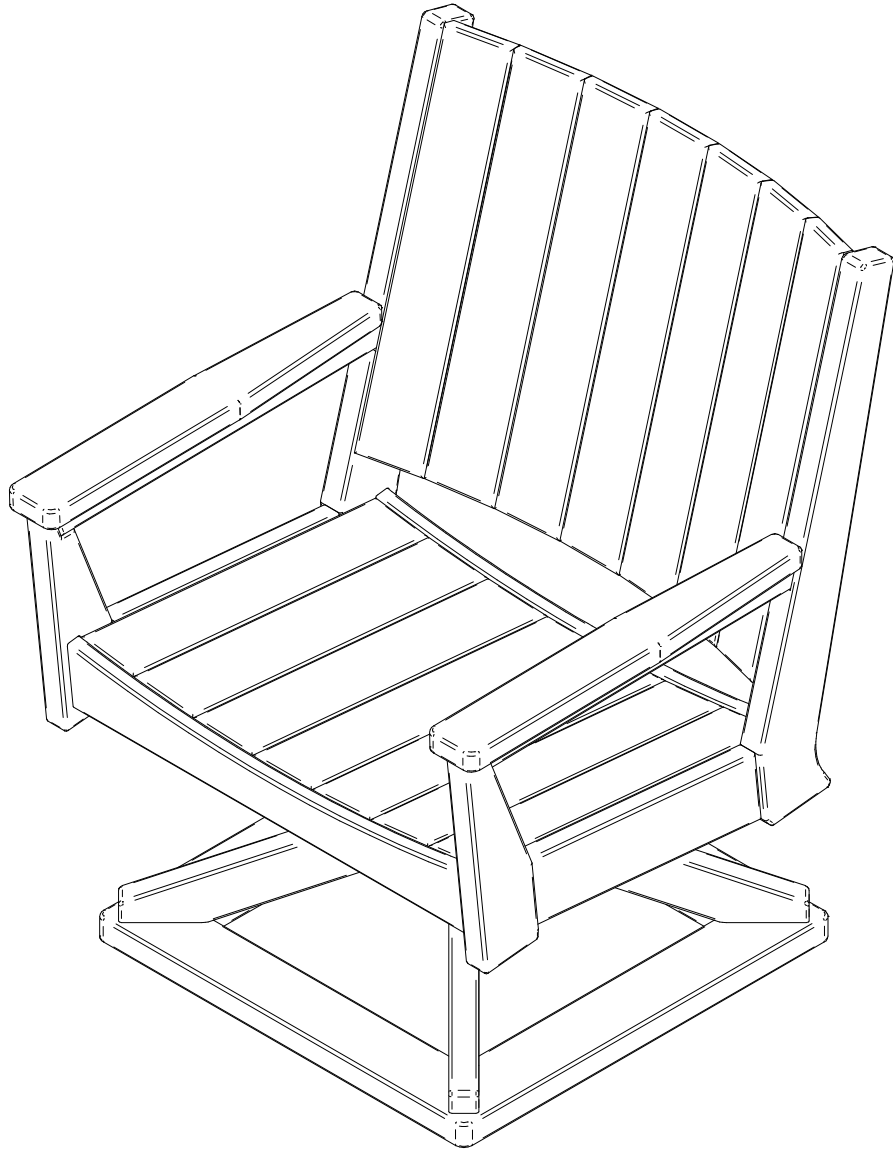


Hardware Included
Matériel inclus
Herrajes incluidos


(38100) x4




(58200) x8

 


(114112) x4

 


(114134) x4

 

(2516114) x6

 


(2516134) x6

 

(61516) x6



 (64516) x6




(72516) x6




(92400) x1



 (95321) x1




(9532) x1

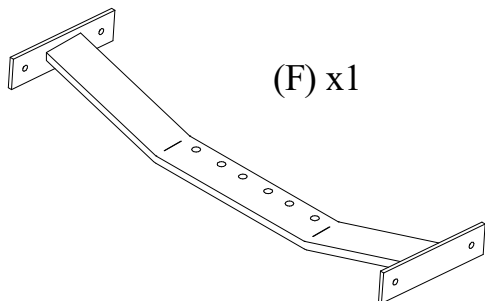 


(F) x1

 (H) x3







 
(G) x3

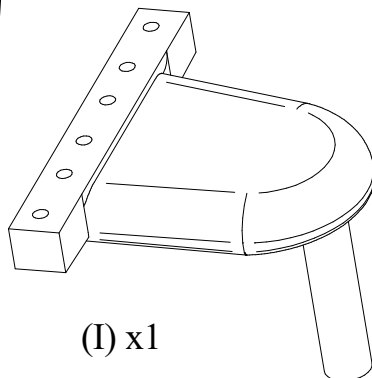


(I) x1

     Items Not Included
Articles non inclus
Artículos no incluidos

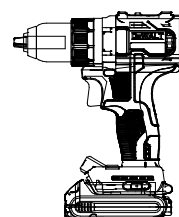


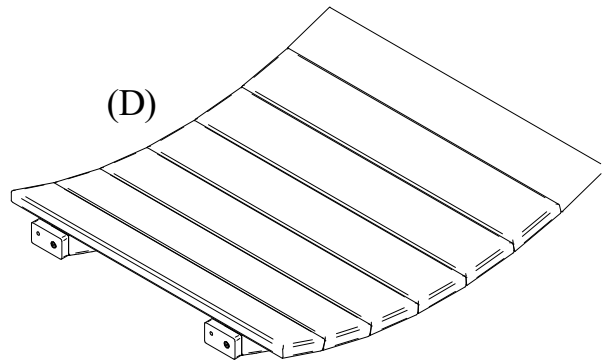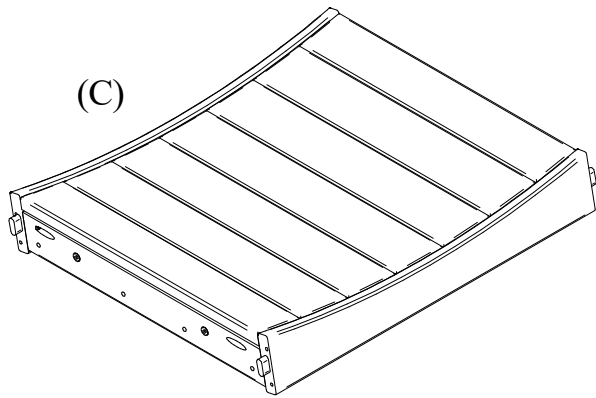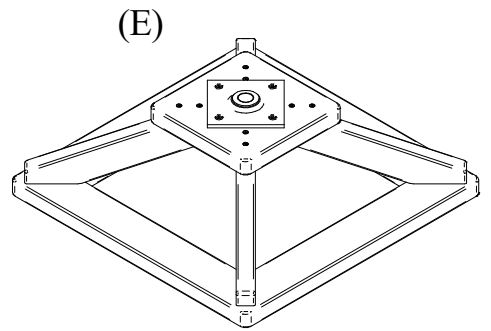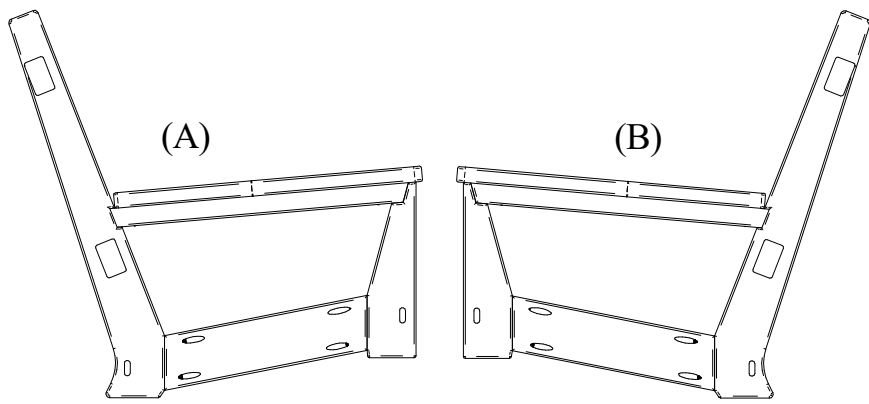



1 (A) x1
(C) x1

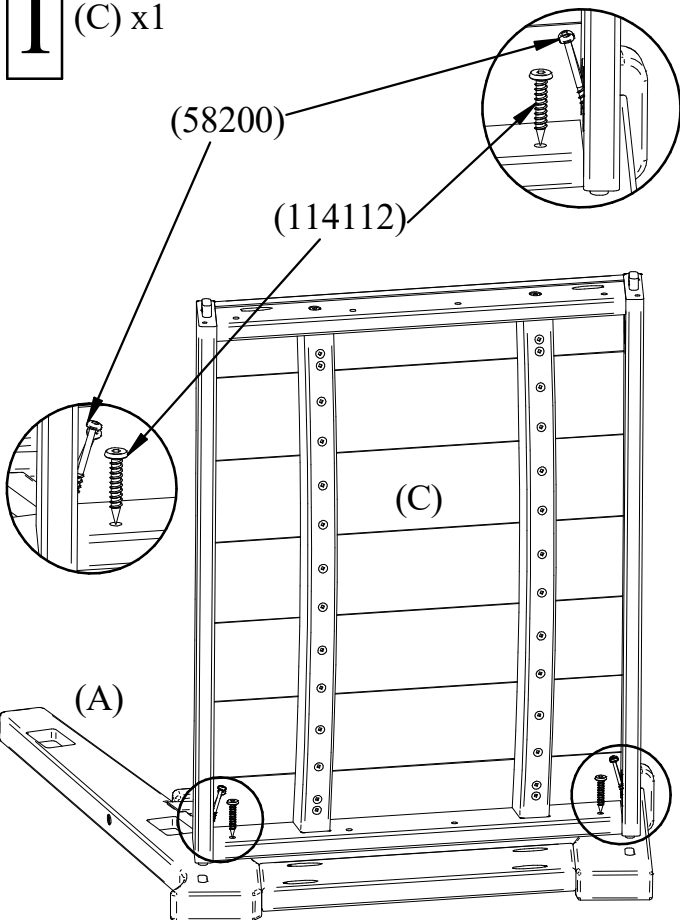 


1a (F) x1

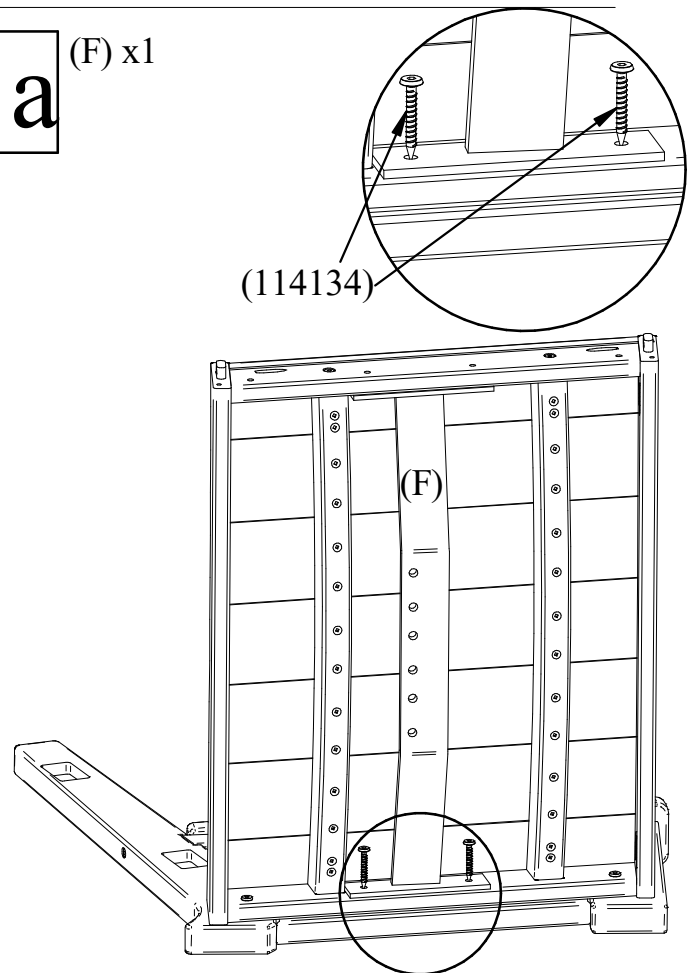 

2 (D) x1

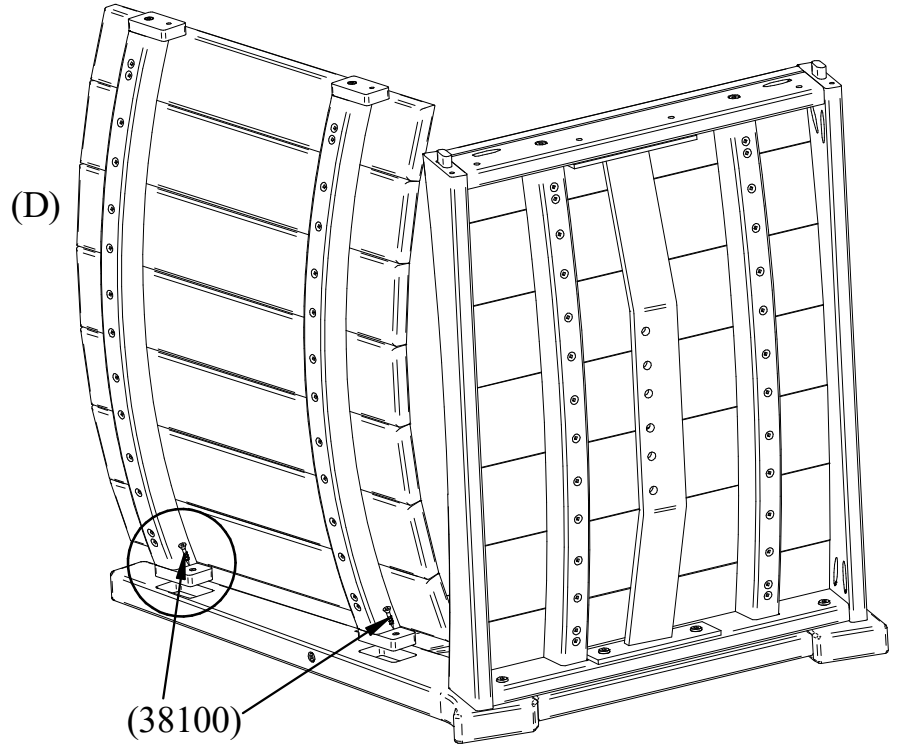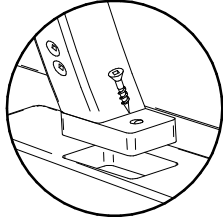  


3 (B) x1

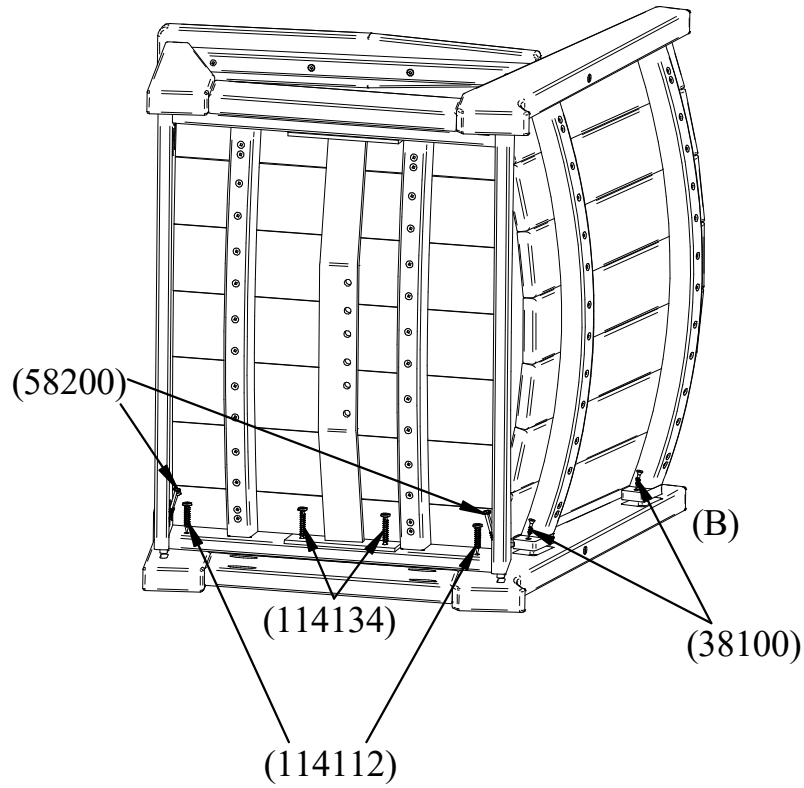 

4


(G) x3
(H) x1

 Firmly Tighten All Bolts and Nuts
Serrez fermement tous les boulons et écrous
Apriete firmemente todos los pernos y tuercas

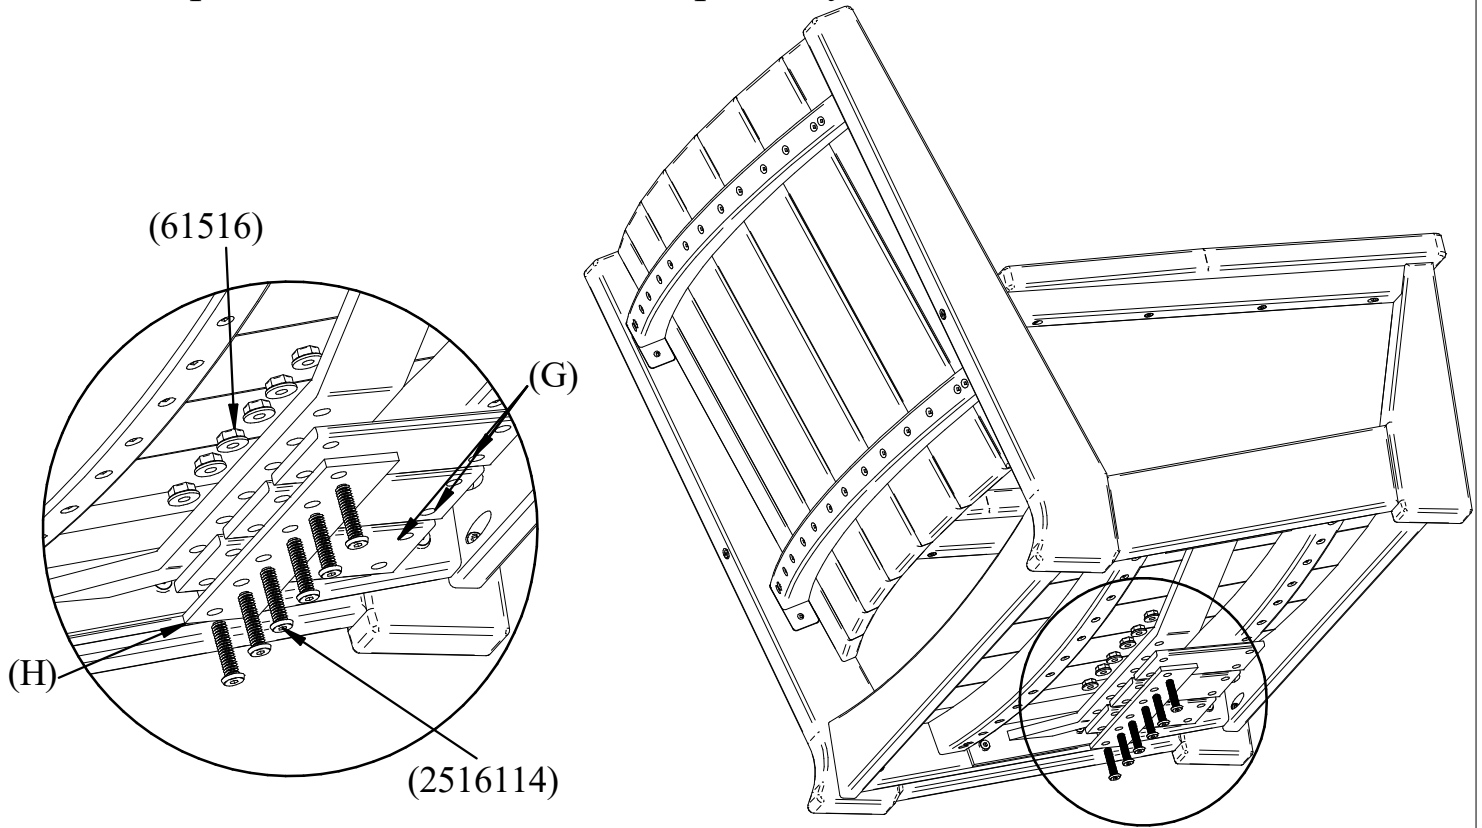
**5**

(H) x2
(I) x1

 Firmly Tighten All Bolts and Nuts
Serrez fermement tous les boulons et écrous
Apriete firmemente todos los pernos y tuercas

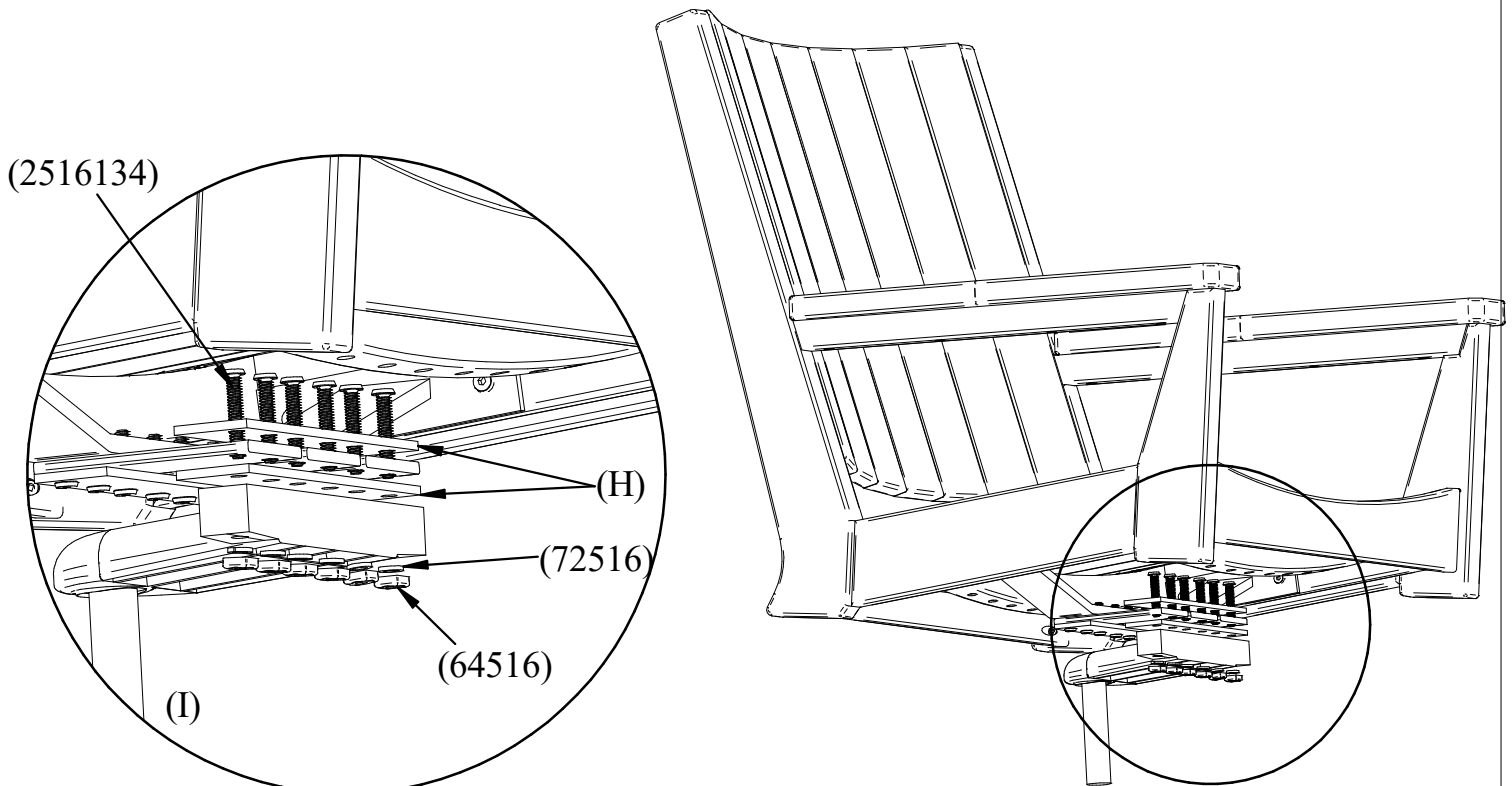

6 (E) x1

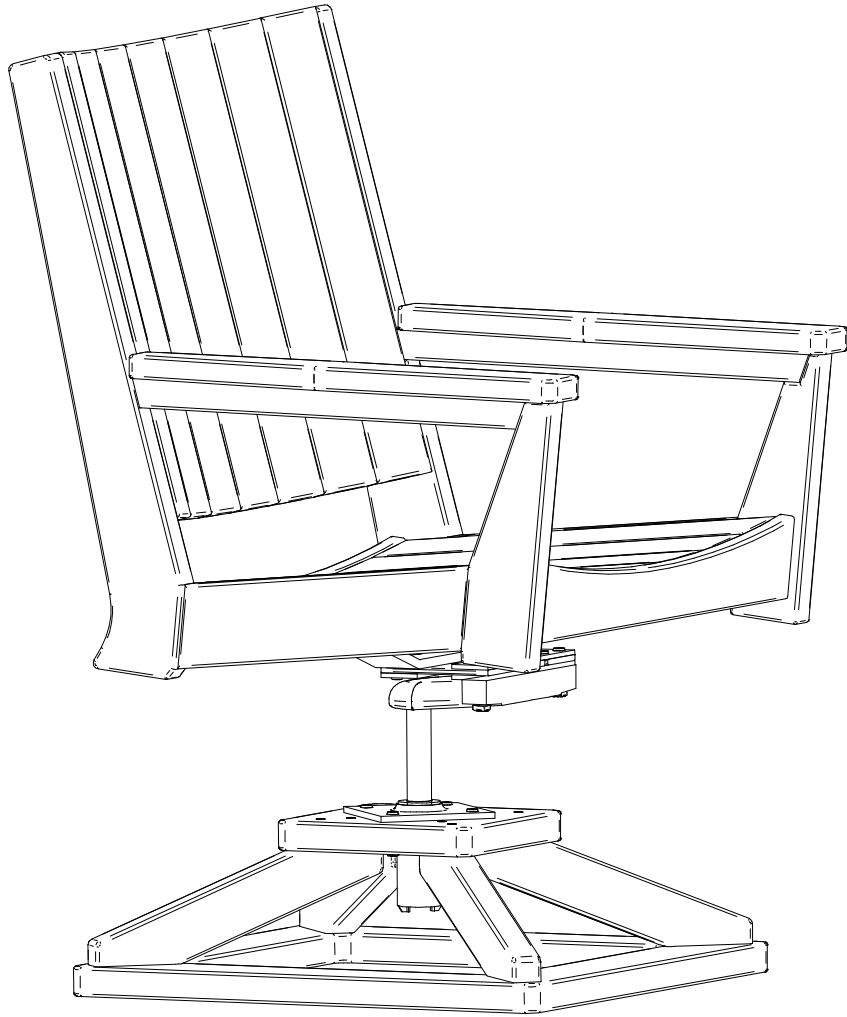 

(E)