 
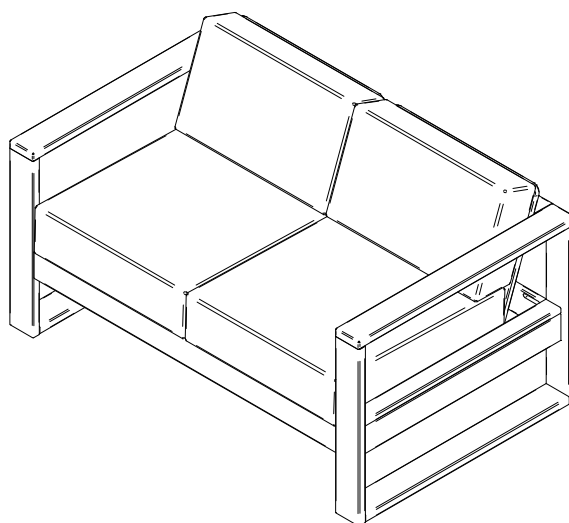 
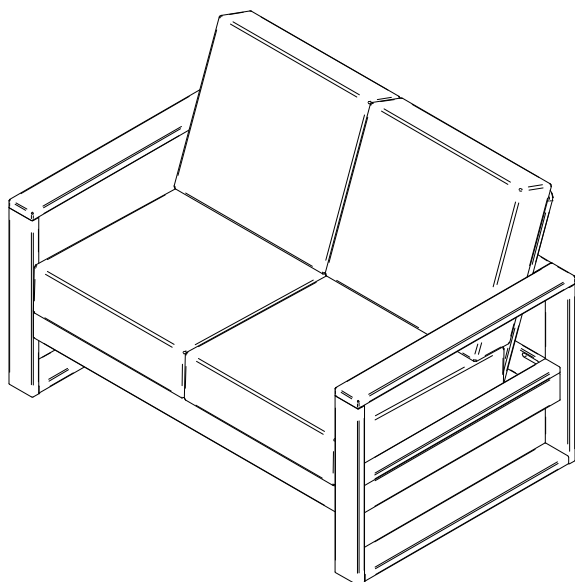 
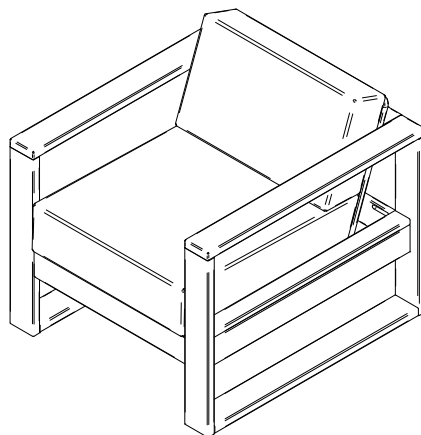 



Nordic CC, LS (HB and LB)  
Nordic CC, LS (HB et LB)  
CC nórdico, LS (HB y LB)

Assembly Instructions  
instructions de montage  
Instrucciones de montaje


BERLIN  
GARDENS

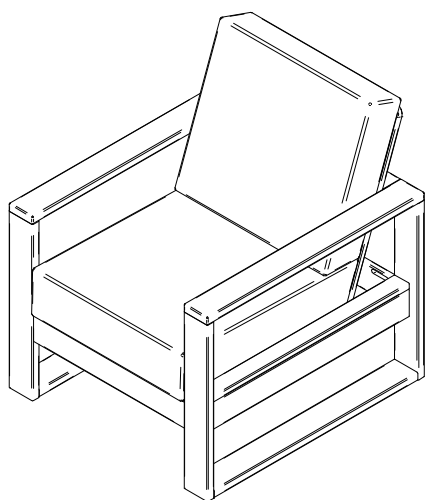

 
(A) x1

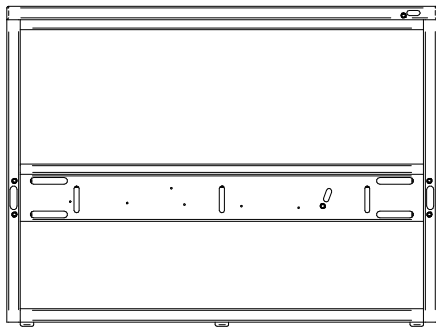

 
(B) x1

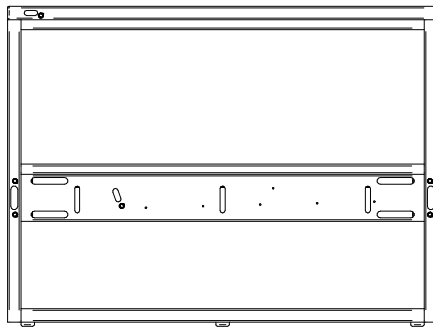

 
(C) x1

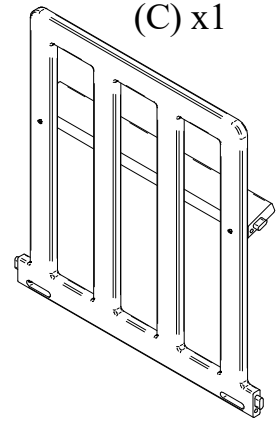

 
(D) x2

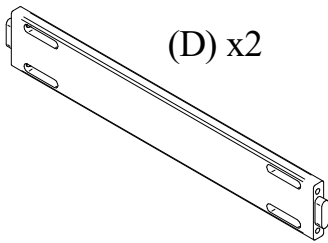

 (E) x2

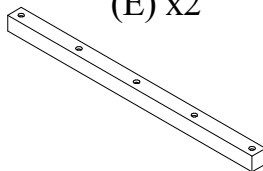


 (F) x1

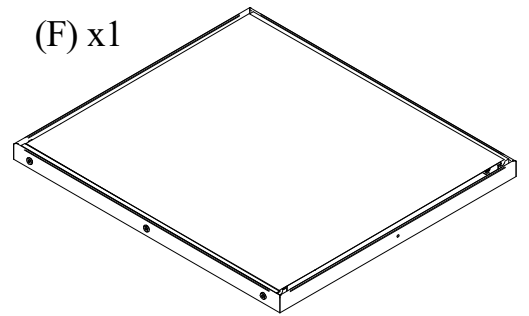


Hardware Included  
Matériel inclus  
Herrajes incluidos

 
(38134) x10




(4834) x2

 

(214112) x12

 

(95326) x1

 

(9532) x1



Items Not Included  
Articles non inclus  
Artículos no incluidos



#2 Square Drive Bit  
Embout d'entraînement carré #2  
Punta cuadrada n.º 2



 
 
Use drill on low speed.  
**DO NOT USE IMPACT DRILL!**  
Utilisez la perceuse à basse vitesse.  
**N'UTILISEZ PAS DE PERCEUSE À IMPACT !**  
Utilice el taladro a baja velocidad. ¡NO UTILICE TALADRO DE IMPACTO!





- 1** (A) x1  
(C) x1  
(D) x2

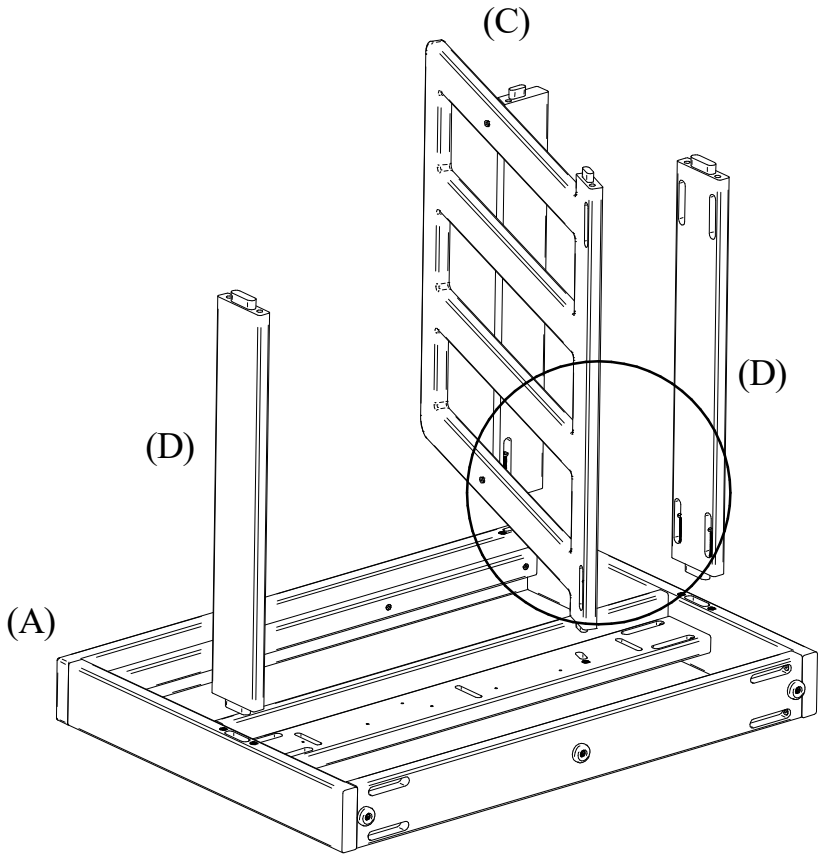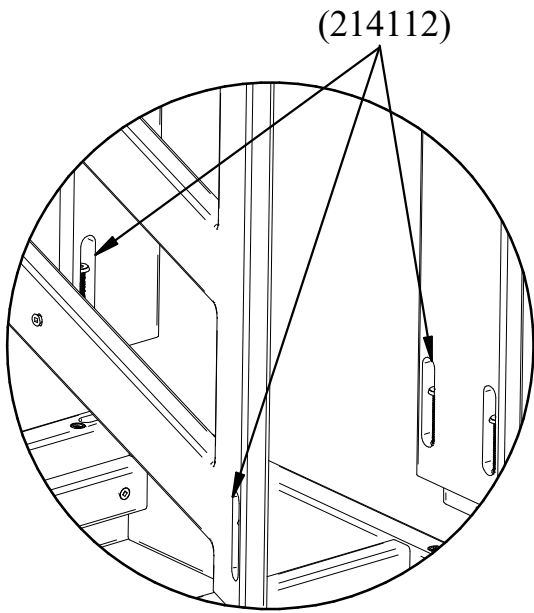

- 2** (B) x1

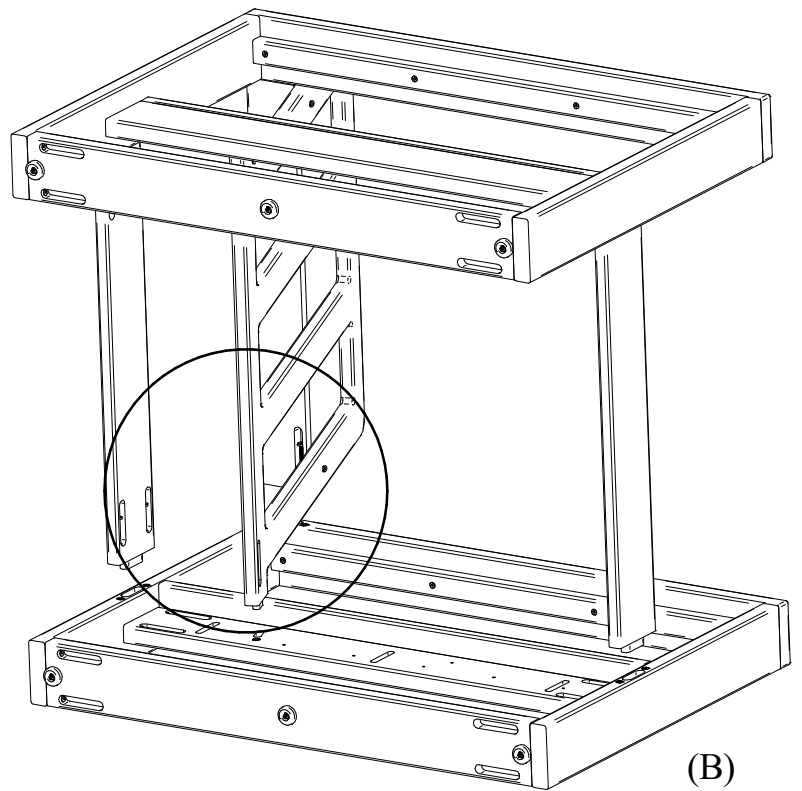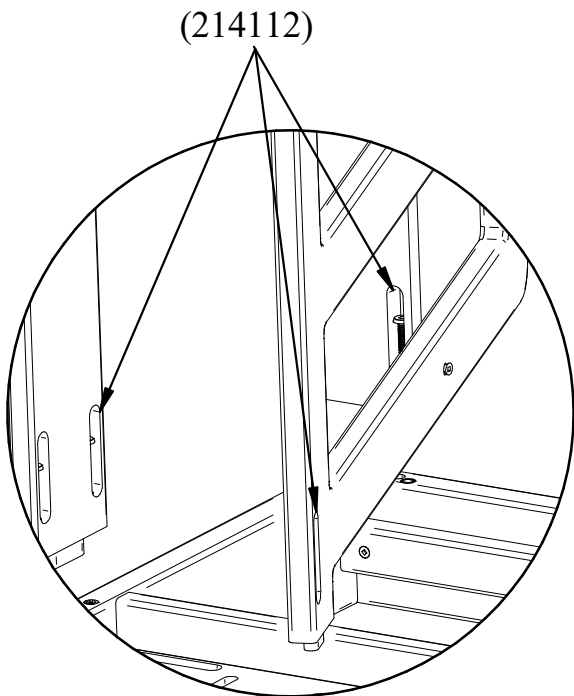  

**3** (E) x2  
(F) x1

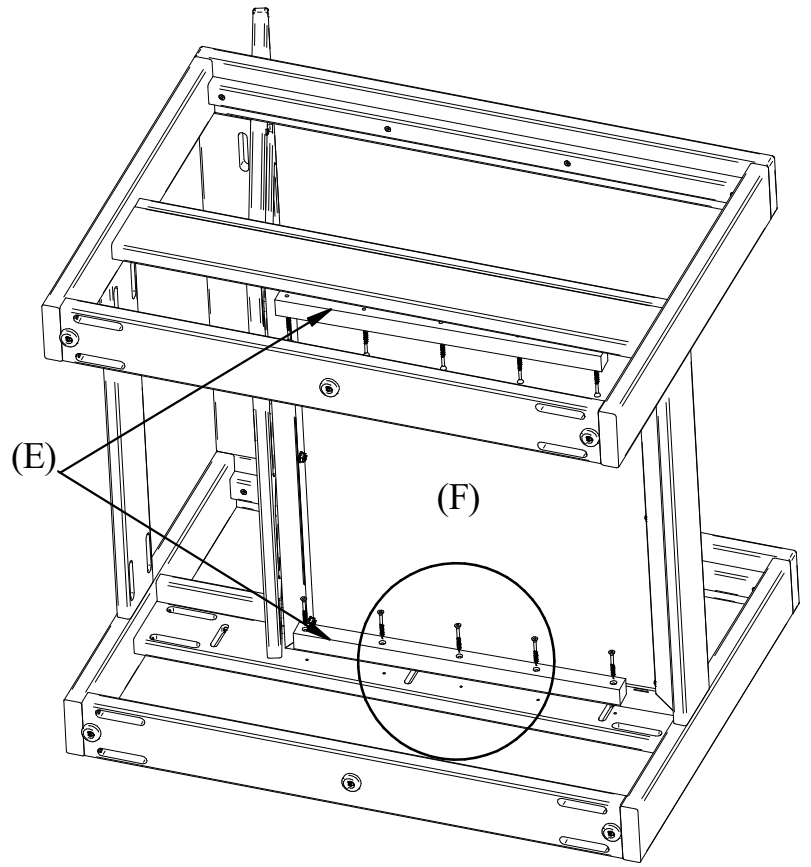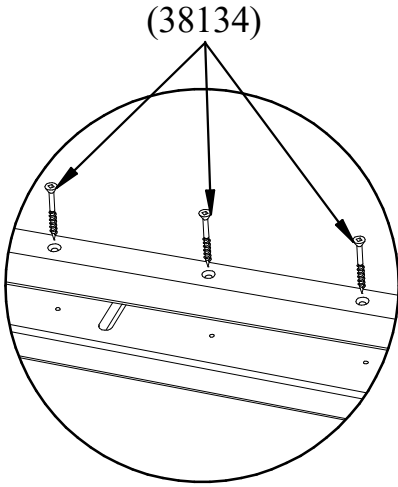  

**4**

