 
 


Parker Dining Chair
Chaise de salle à manger Parker
Silla de comedor Parker

 
Assembly Instructions instructions de montage Instrucciones de montaje

BERLIN
GARDENS

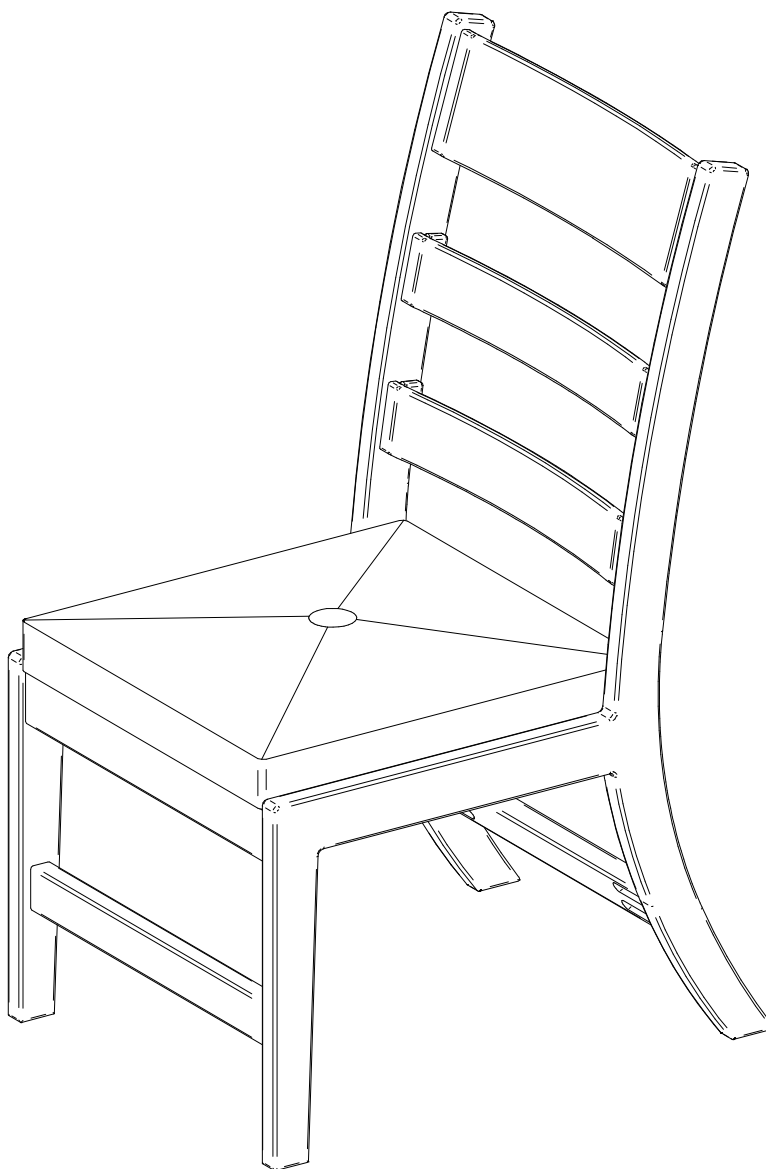


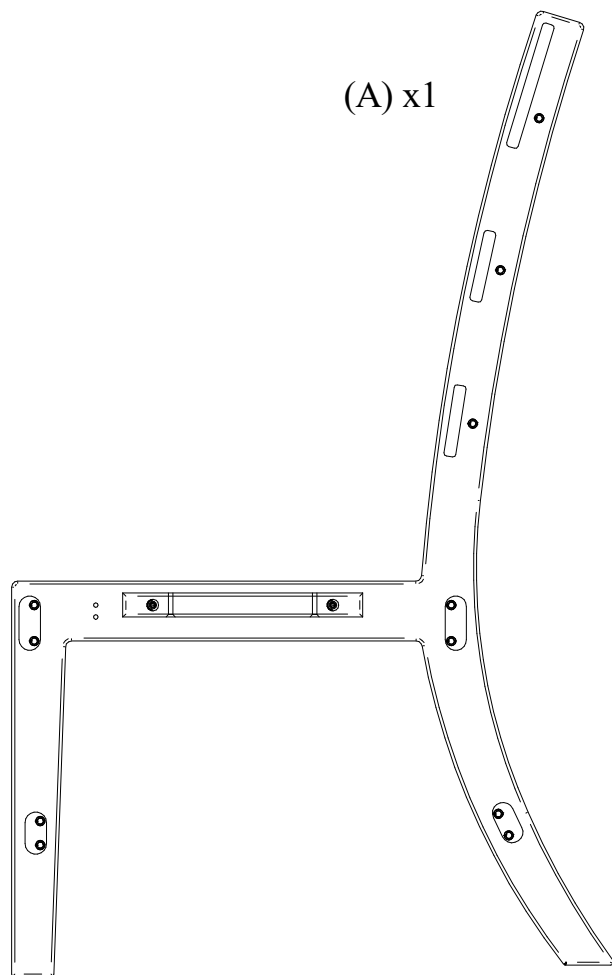


(A) x1

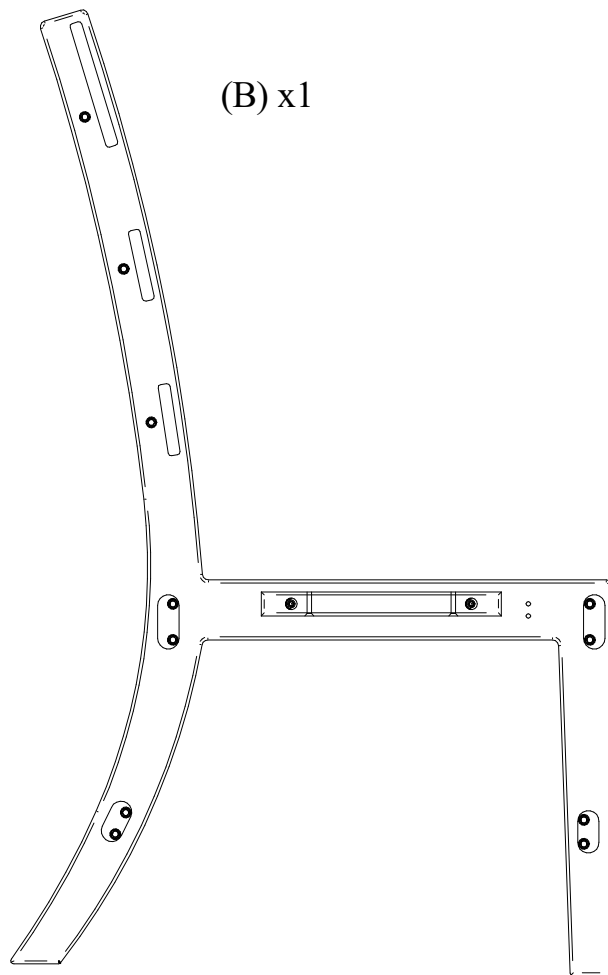

 
(B) x1

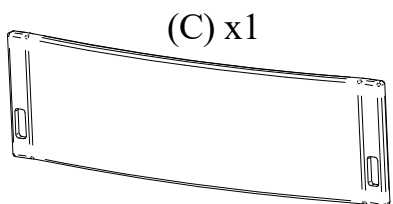

 
(C) x1

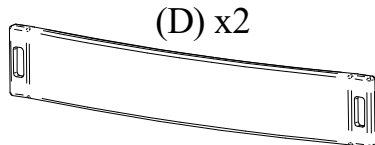

 
(D) x2

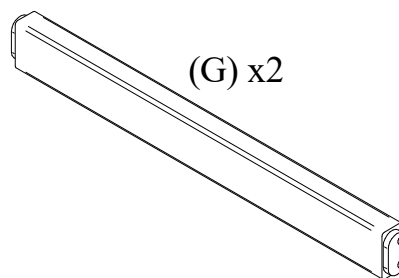

 (G) x2

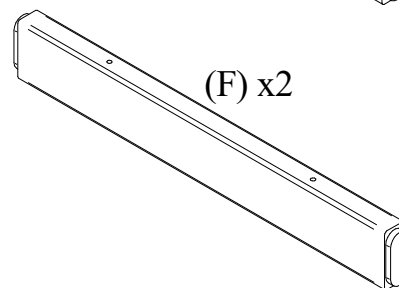

 (F) x2

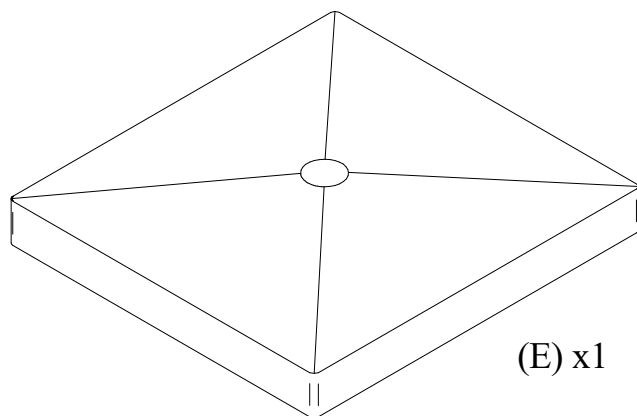

(E) x1



 
(H) x6

Hardware Included
Matériel inclus
Herrajes incluidos


(95326) x1




(9532) x1

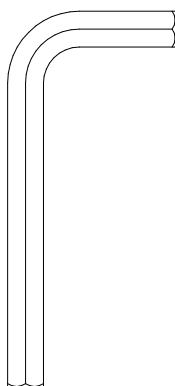


(38300) x4

 


(38112) x4

 

(214112) x16

 


(21434) x6

 

Items Not Included
Articles non inclus
Artículos no incluidos



#2 Square Drive Bit
Embout d'entraînement carré #2
Punta cuadrada n.º 2

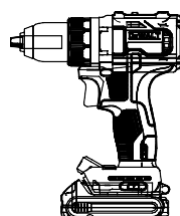 


Use drill on low speed.
**DO NOT USE IMPACT
DRILL!**
Utilisez la perceuse à basse
vitesse. **N'UTILISEZ PAS
DE PERCEUSE À IMPACT !**
Utilice el taladro a baja
velocidad. **¡NO UTILICE
TALADRO DE IMPACTO!**

1

  
(A) x1
(C) x1
(D) x2
(F) x2
(H) x3

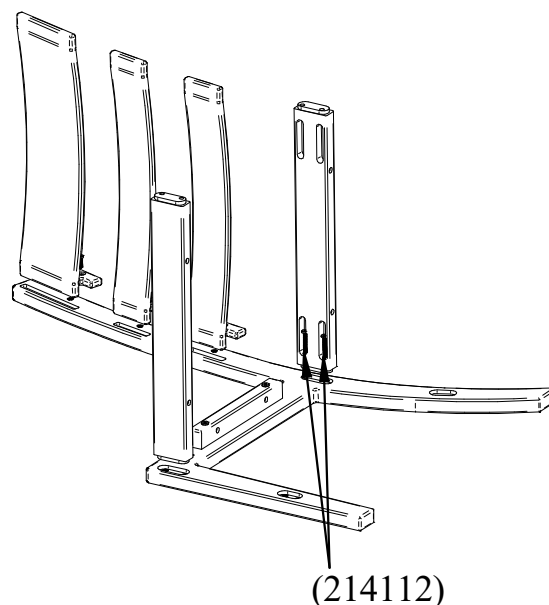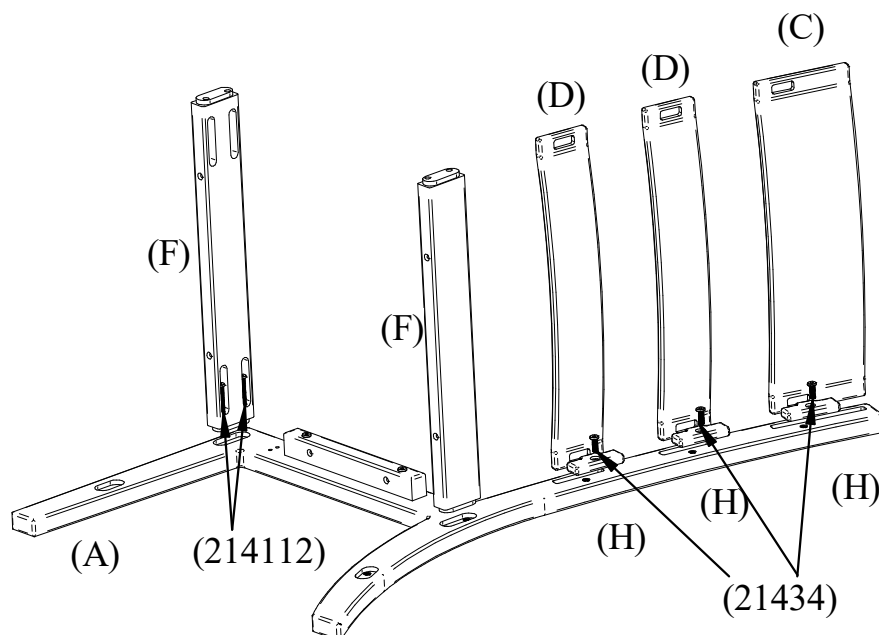

2 (E) x1

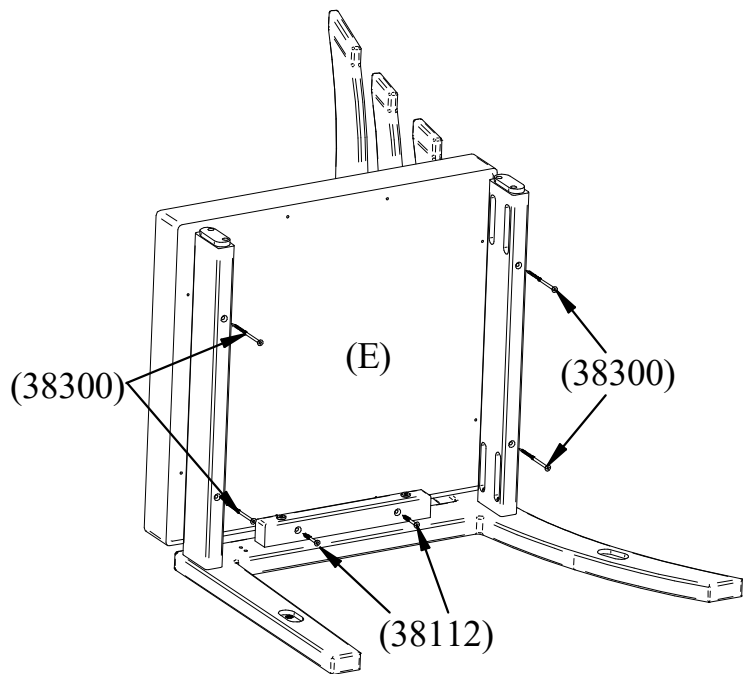 

3 (G) x2

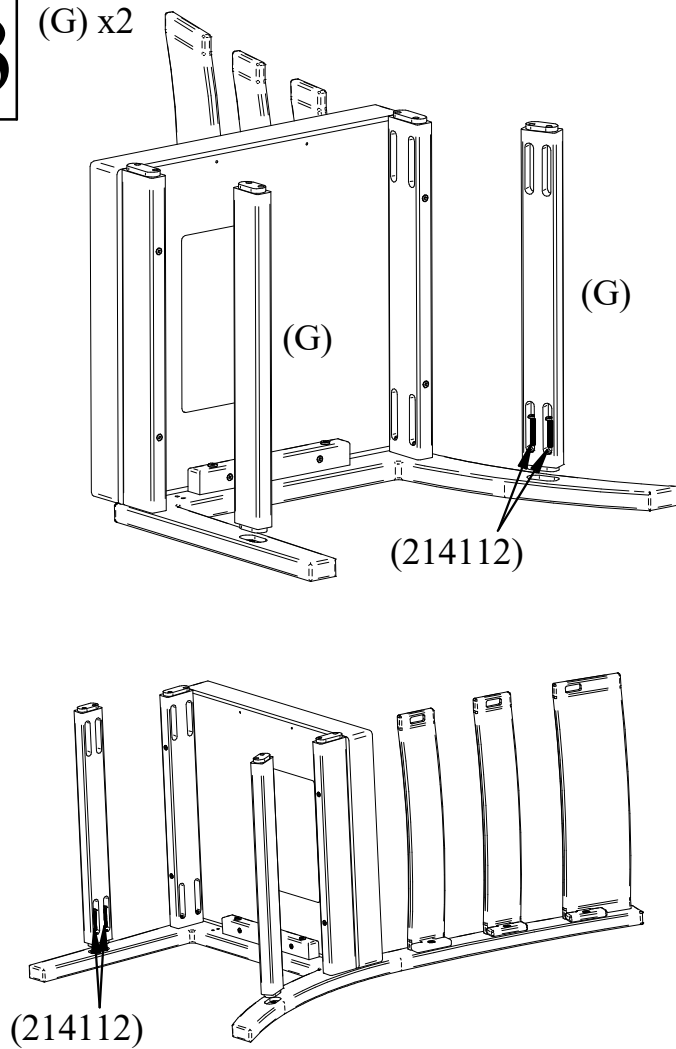 

4 (B) x1
(H) x3

