

Assembly Directions for the *Outdoor Island*

Item Number: ODIS4272, ODIS4272IB(with Ice Bowl)




Hardware Package

- 1 Allen Wrench
- 8 • 1/4" Flange Nuts
- 8 • 1 1/2" Allen Head Bolts
- 4 • 3" Bugle Head Sq. Drive Screws
- 4 • 2 1/2" Bugle Head Sq. Drive Screws
- 24 • 1 1/2" Bugle Head Sq. Drive Screws
- 24 • 1 1/4" Pandeck Screws
- 40 • 5/8" Panhead Screws (12 if MGP)

Package Contents

- | | |
|--------------------|---------------------------------------|
| 1 Island Top | 1 Bottom Center Partition Shelf Board |
| 1 Counter Top | 1 Top Center Partition Shelf Board |
| 1 Front Panel | 1 Ice Bowl |
| 1 Back Panel | 1 Ice Bowl Lid |
| 2 Side Panels | 4 Long Corner Blocks |
| 12 Shelf Boards | 4 Short Corner Blocks |
| 6 Partition Boards | 4 Top Braces |




Use to measure bolts

Tools Needed

- Cordless Drill
- #2 Sq. Drive Bit

Step #1

Lay the "Front Panel" face down on a carpet, or blanket. Attach the first "Side Panel" using 1¼" Pandeck Screws. (*Be sure to match the legs on the Side Panel with the ones on the Front Panel.*) Make sure to keep the legs flush at bottom. (*See Picture Step#1B*)

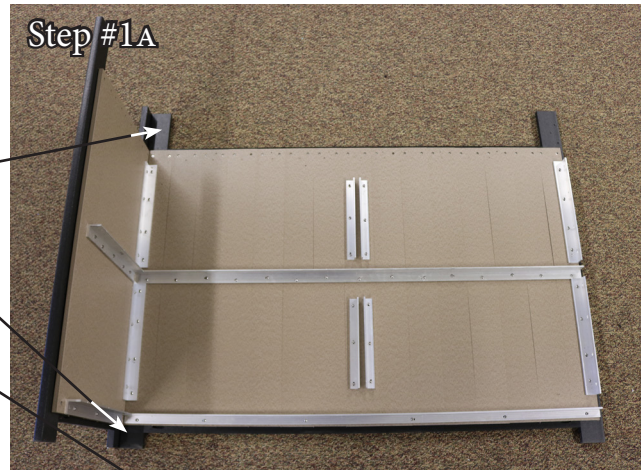

Step #2

Repeating Step #1, fasten the second "Side Panel" with 1¼" Pandeck Screws. Make sure to keep the legs flush at bottom. (*See Picture Step#1B*)



Step #3A

Slide the "Counter Top" in to place (*See Step #3A*)



Step #3B

Fasten the "Counter Top" on the three sides of the Panels (*See Step #3B*), using $\frac{5}{8}$ " Pan Head Screws. *Push inward on the Counter Top against the Panels while fastening.* (Be sure to have the Hole for the Ice Bowl on the Right side!!!!!!!)

Fasten these three sides with $\frac{5}{8}$ " Panhead Screws.

2 People are needed for Step #4 and Step #8-9.

Step #4

Set the "Top Center Partition Shelf Board" above the center aluminum brace. (*the Center has the black braces on both sides*). Next slide the Partition Boards in please and repeat with the bottom section.

Top Center Partion Shelf Board.

Partition Shelf Board.

Bottom Center Partion Shelf Board.

Step #5

While one person is holding the Partition Boards, etc. as the other sets the Back Panel on top. Fasten this using $1\frac{1}{4}$ " Pandeck Screws on the Left, & Right Side Panels, and use $\frac{5}{8}$ " Pan Head Screws to fasten the Back Panel to the Counter Top.

$\frac{5}{8}$ " Pan Head Screws.
 $1\frac{1}{4}$ " Pandeck

Step #6


Set the Corner Block (The long ones) in Corner Upright being sure it sits on the Counter Top. Fasten using $1\frac{1}{2}$ " Screws.



Step #7

Repeat Step #6 on the bottom side, fastening those corner blocks (The short ones) with 1½” Screws.

Corner Blocks

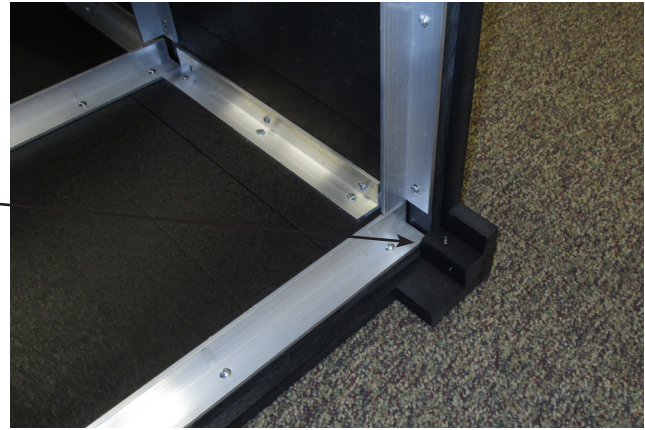

Step #8

Please align Base, and Island Top (as shown as in the picture.) With 2 people turn the Base upside down, & set it in the frame of the Island Top with the Upright Corners in place as marked.



Step #9

Set the Top Brace in Position. Insert bolts, and hand tighten only. Then fasten using (1) 3”, & (1) 2½” Screws into the base part of the Island.

2½” Screws

3” Screws

