



Assembly Directions for Outdoor Bar


Outdoor Bar Model #P0BB3955

Step #1 With corners flush, fasten corners using 2" screws (ten per end).

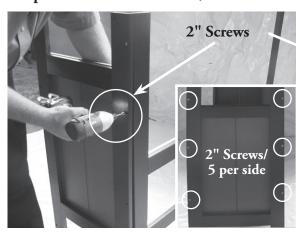

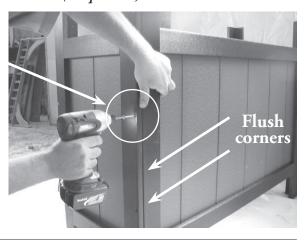

Step #2 With the shorter overhang situated above the shelve opening, place bar top on the side uprights. Then fasten all sides using ³/₄" screws.

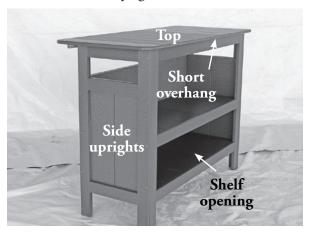



Step #3 Place shelves on ledges.

TOOLS NEEDED:

Cordless Screw Gun w/ Square Driver Bit.

PACKAGE CONTENT

- 1 Front
- 1 Top
- 1 Back
- 2 Sides
- 1 Hardware Package
- 12 Pieces of Shelving

HARDWARE PACKAGE

- 22 2" Stainless Steel Screws (20 if MGP)
- 18 ¾" Stainless Steel Screws (16 if MGP)

