

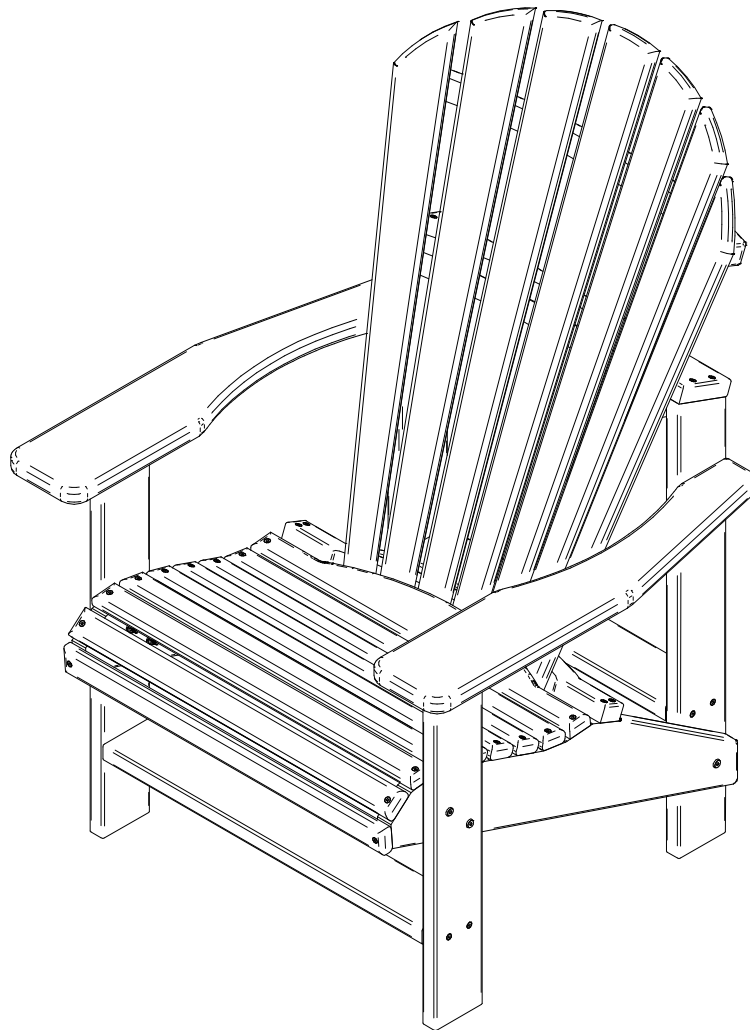
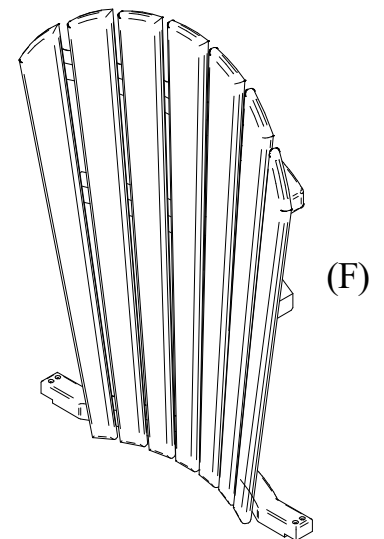
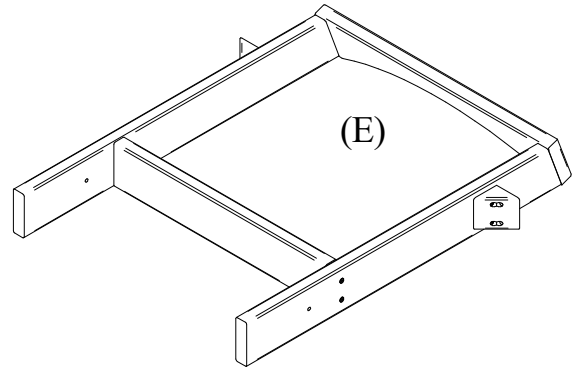
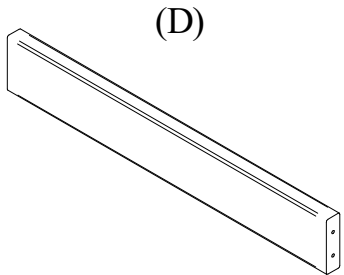
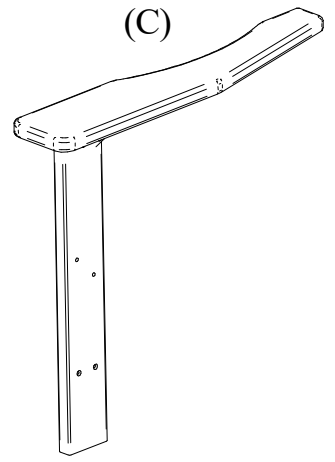


Comfo Upright Adirondack  
Adirondack vertical Comfo  
CÓmodo Adirondack vertical

Assembly Instructions  
instructions de montage  
Instrucciones de montaje


BERLIN  
GARDENS

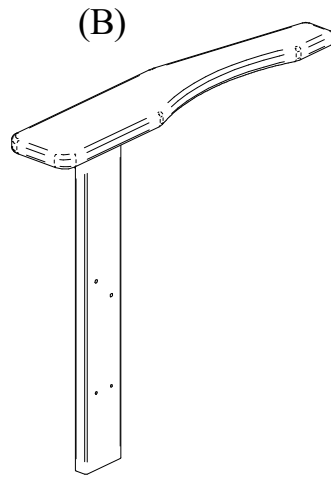

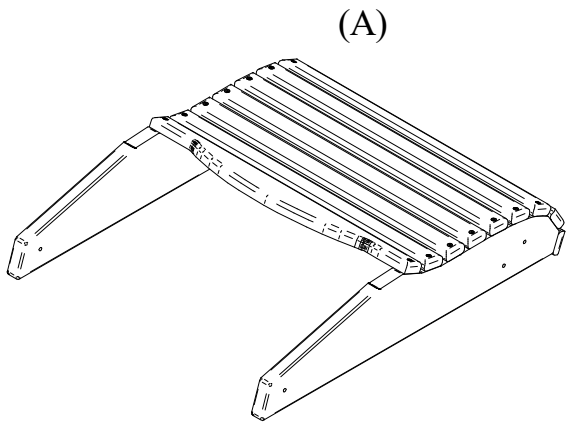


Hardware Included  
 Matériel inclus  
 Herrajes incluidos


(38200) x12



(38112) x4




(214212) x6



(9532) x1



(6114) x6





Items Not Included  
 Articles non inclus  
 Artículos no incluidos





#2 Square Drive Bit  
 Embout d'entraînement carré #2  
 Punta cuadrada n.º 2





7/16 in. wrench  
 Clé de 7/16 po  
 Llave de 7/16 pulg.

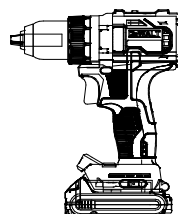



**1** (A)  
(B)  
(C)  
(D)

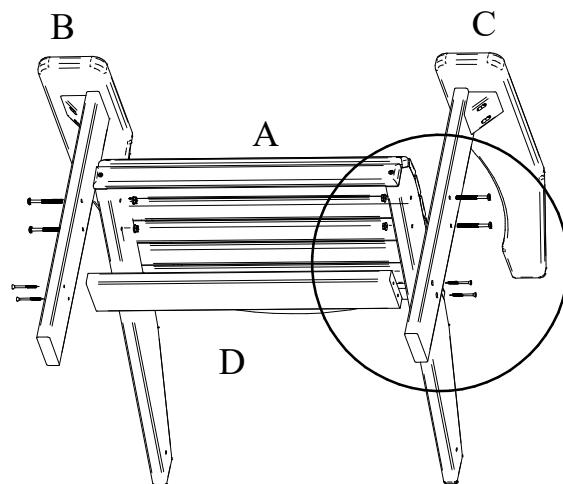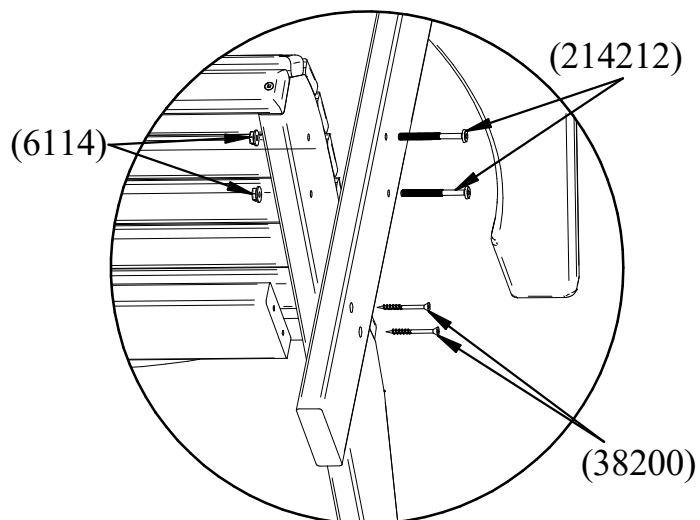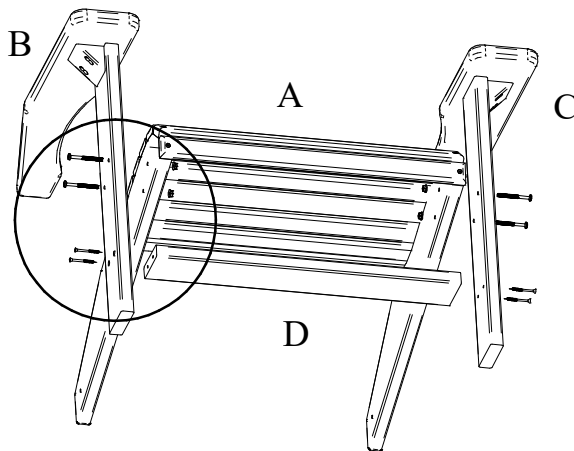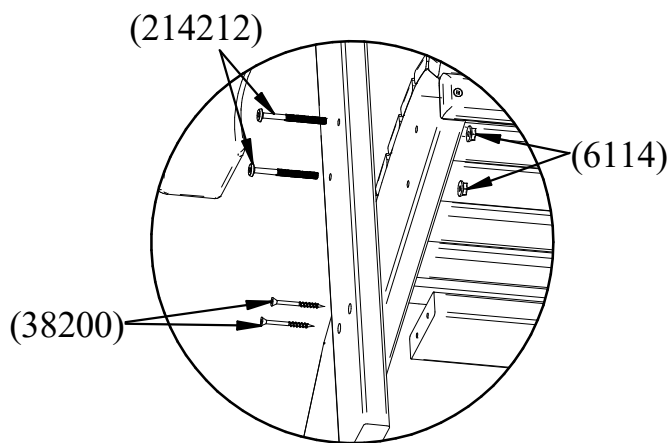



**2** (E)

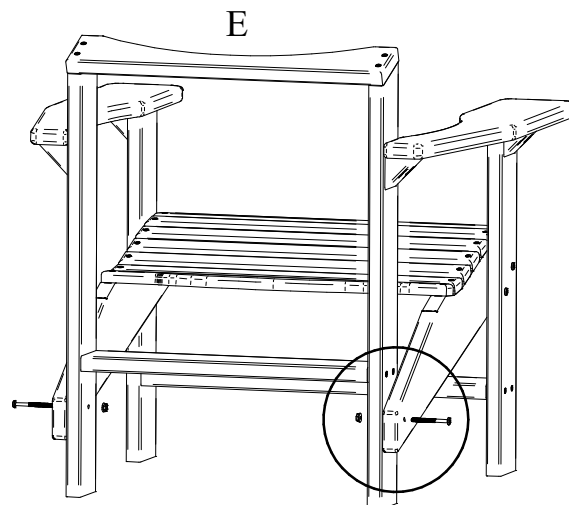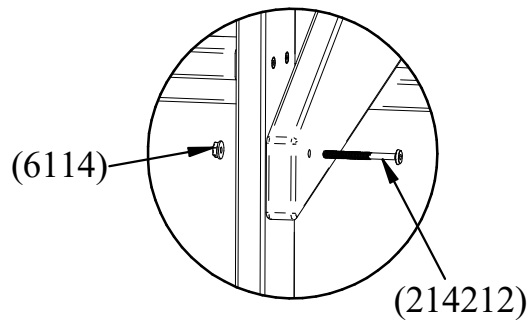

3

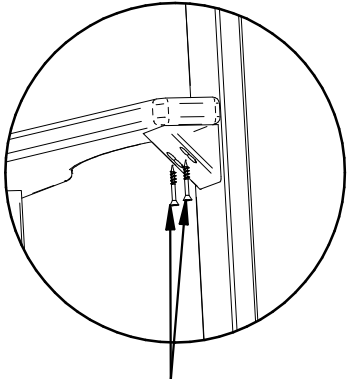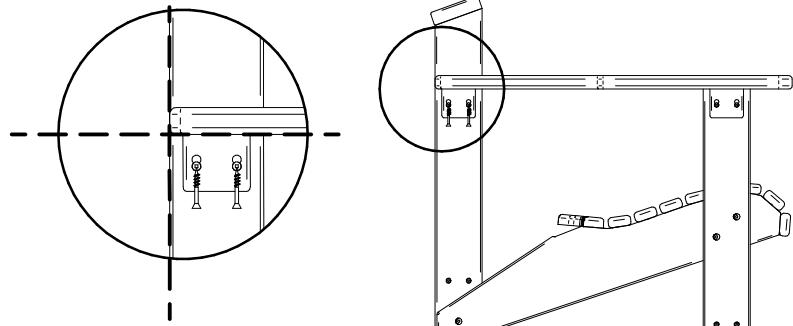


(38112)

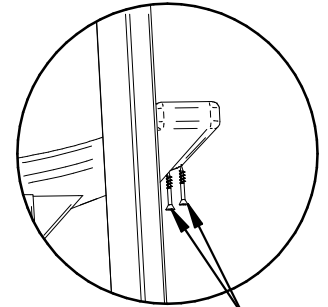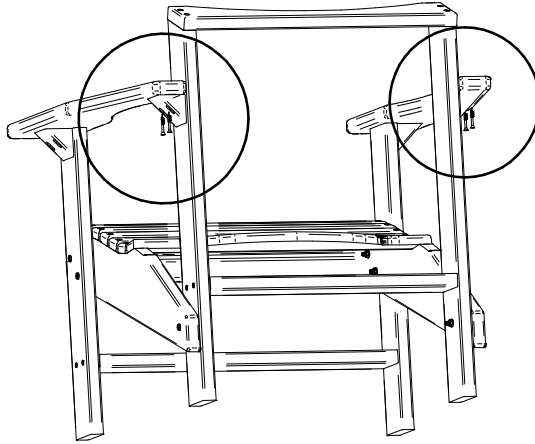


(38112)

4 (F)

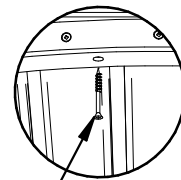

(38200)

(F)

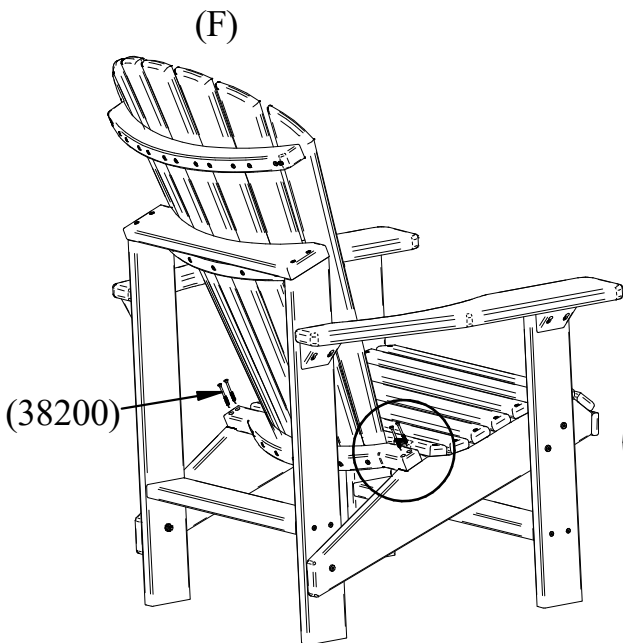

(38200)

(38200)

